

ALLEN&HEATH

Parts identification sheet


W³ 12 / 16

How to order parts


Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

WZ³16:2 Internal Layout

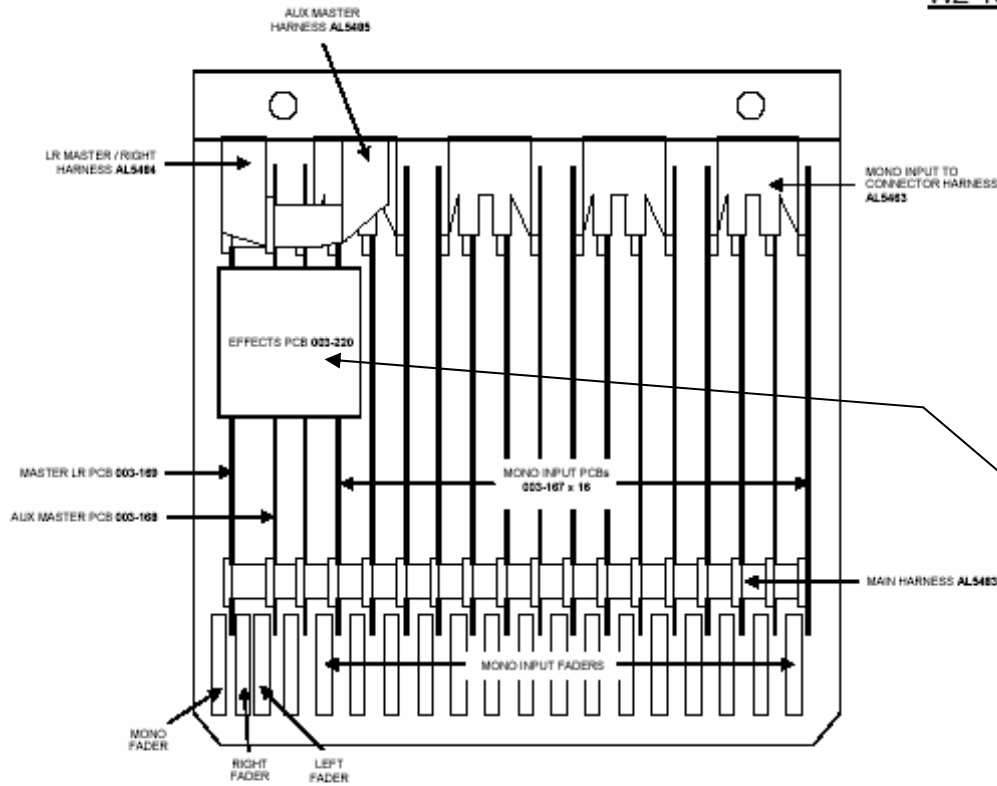

Product	W31602/100
.....	W31602/110
.....	W31602/120
.....	W31602/220
.....	W31602/240
Pack Assembly	003-164
Main Assembly	003-163
PSU PCB	003-171
PSU Module	003-185
Mono Input PCB	003-167
Connector PCB	003-170
Aux Master PCB	003-168
Master LR PCB	003-169
Effects PCB	003-220
SYS-LINK V2 Out PCB	003-260


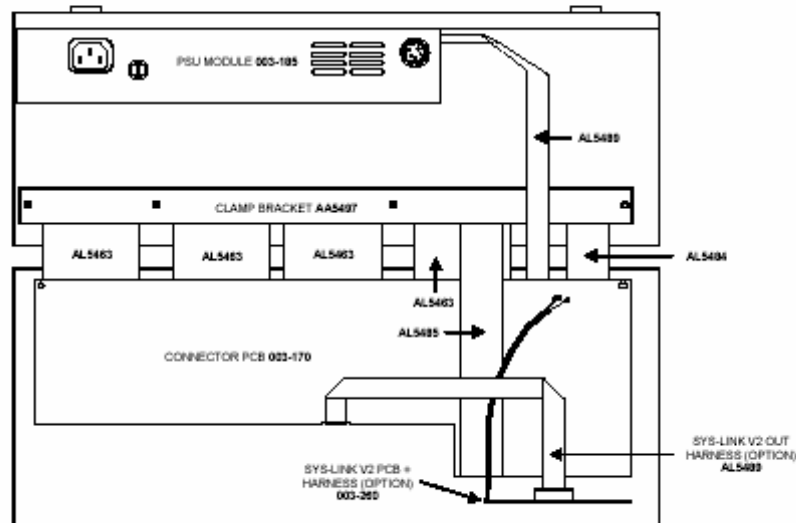


There are two FX PCBs. Check the AGxxxx number printed on the PCB.

FX PCB #1 AG5584 = order part number 003-220

FX PCB #2 AG6551 = order part number 003-567

WZ³ 16:2 / 12:2 Surface Parts

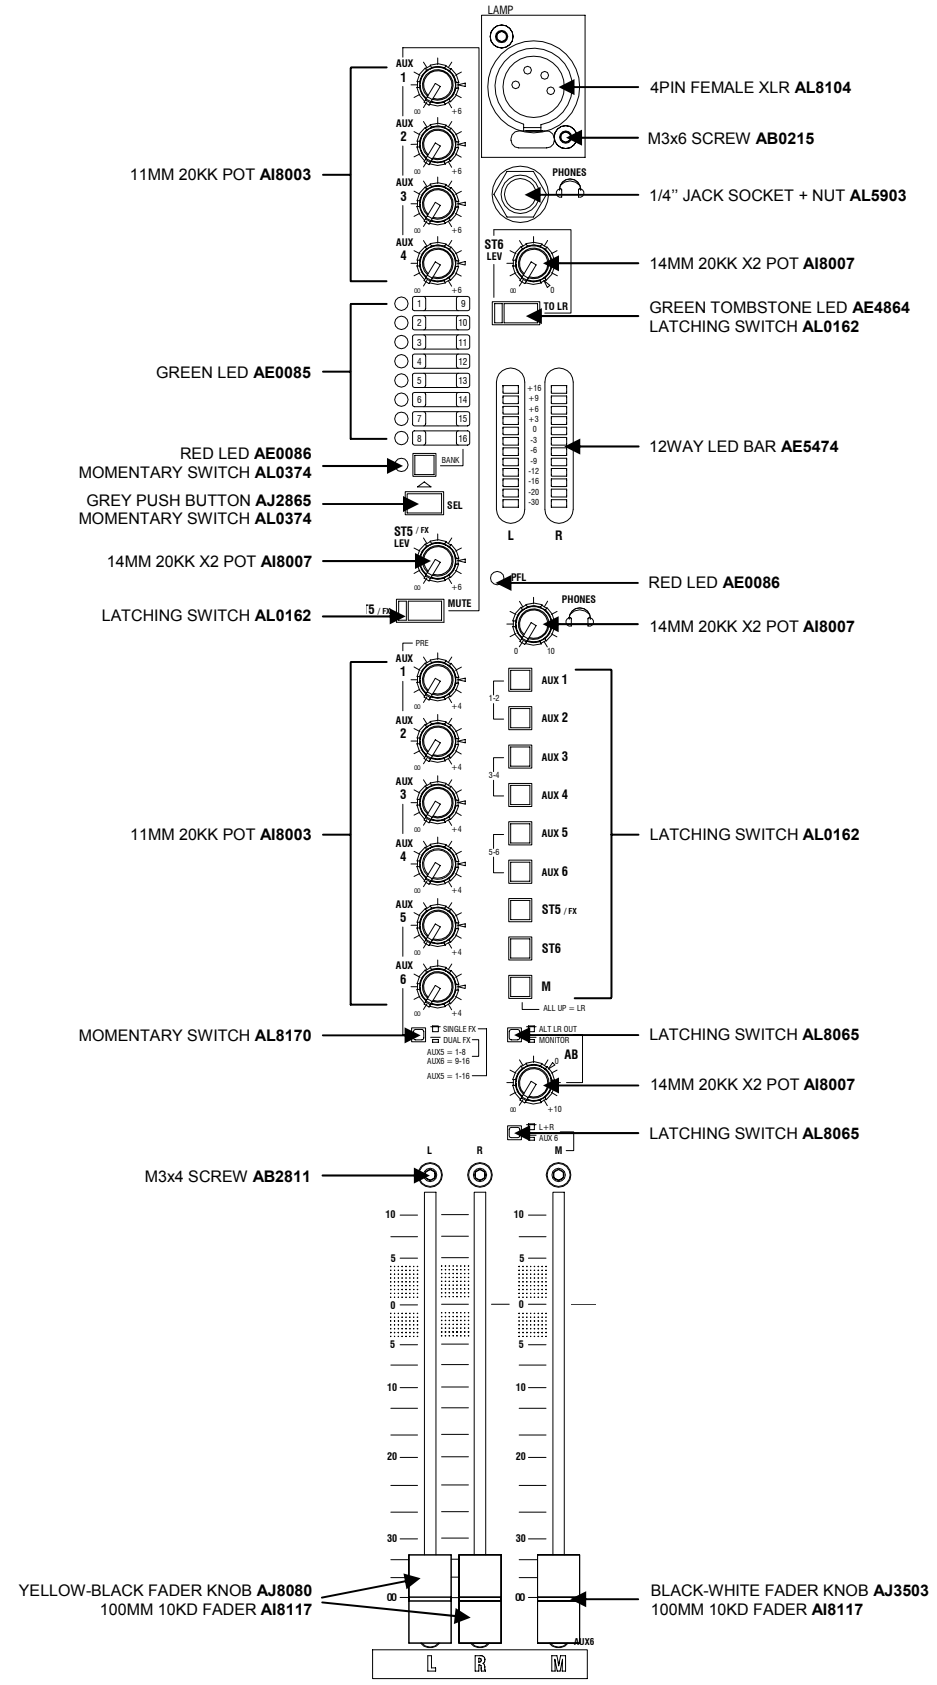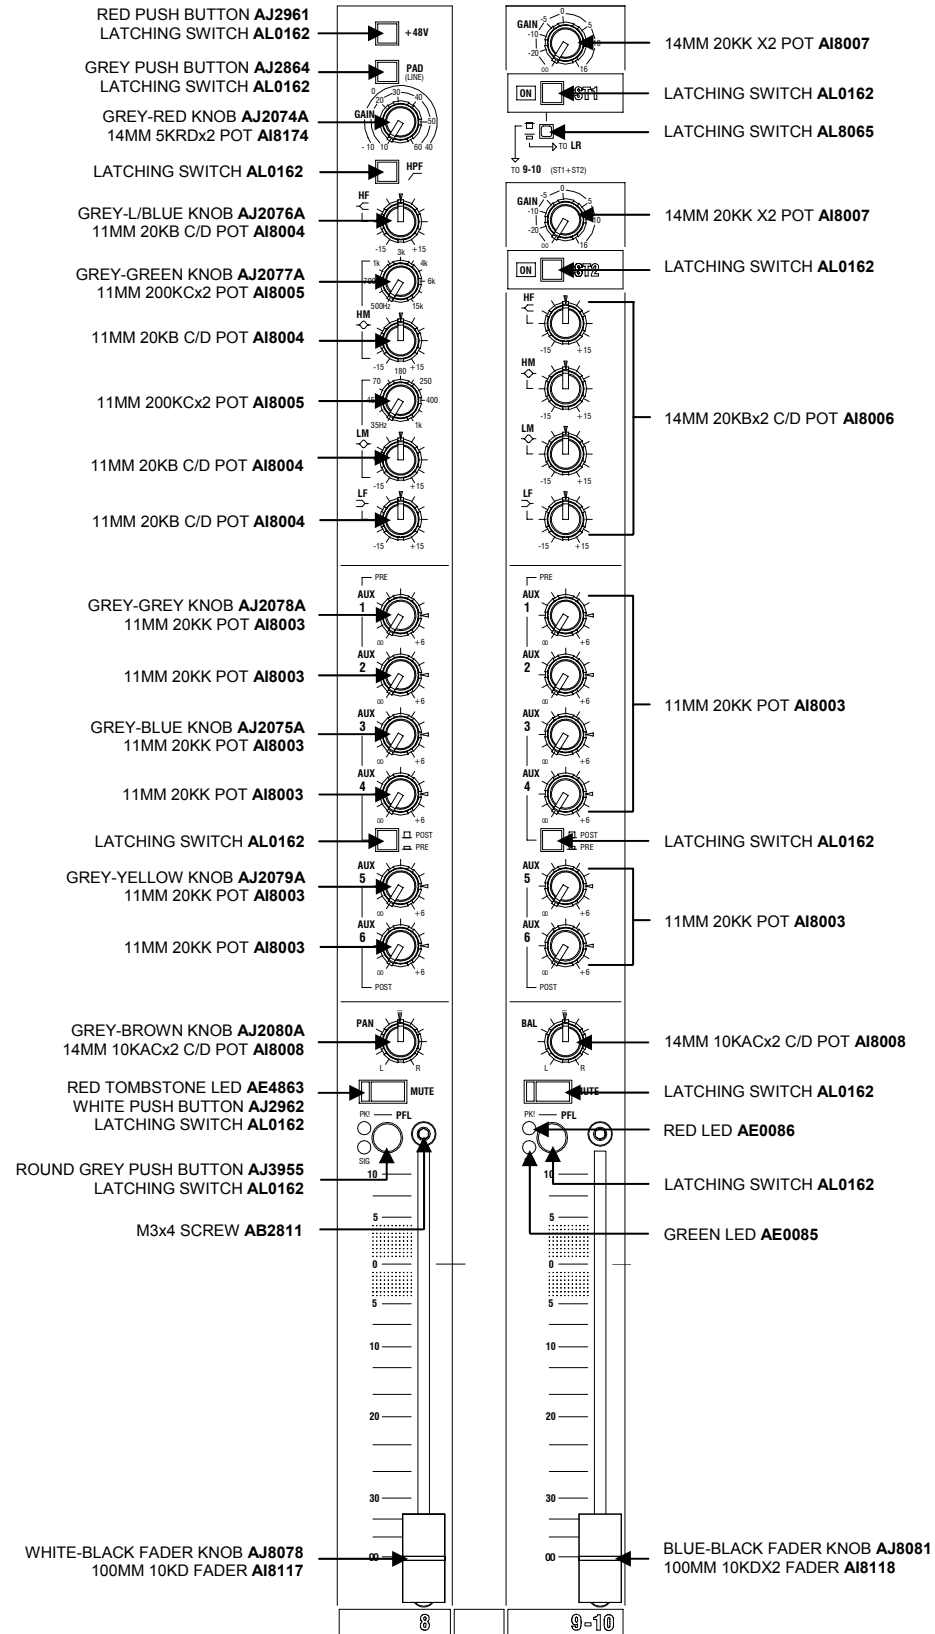

WZ³ 16:2 / 12:2 Surface Parts

