


ALLEN & HEATH

AB1608-RK19

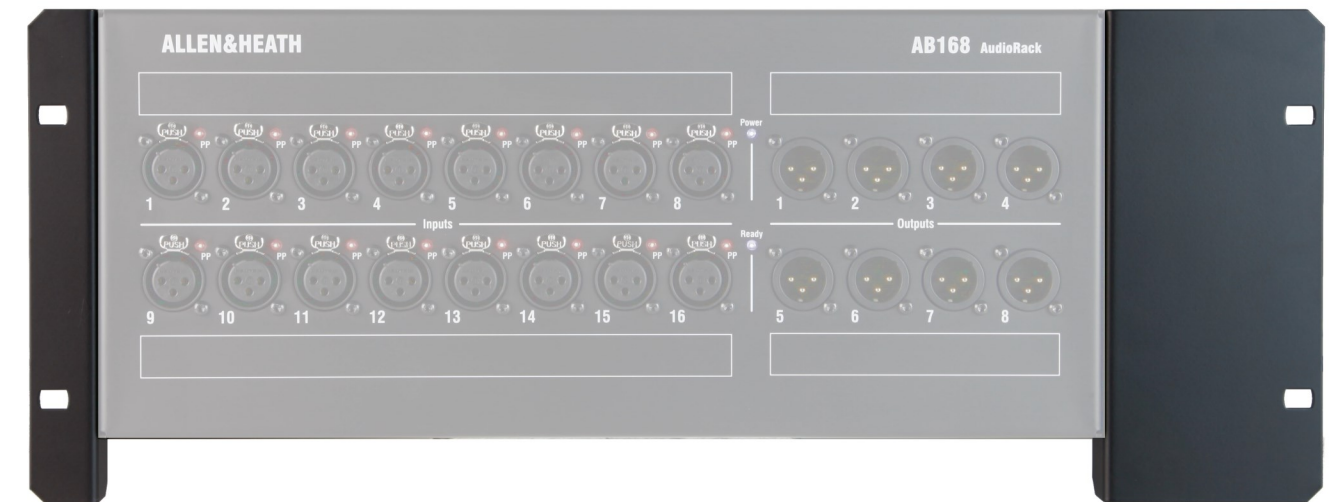

Allen & Heath Limited
Kernick Industrial Estate,
Penryn,
Cornwall TR10 9LU
U.K.
Tel: 44 (0) 1326 372070
Fax: 44 (0) 1326 377097

<http://www.allen-heath.com>

19" RACK EARS OPTION

This option enables you to fit 19" Rack Ears to the AB168 AudioRack.

FITTING INSTRUCTIONS

Publication **AP9589**

Issue 3 June 2018

FITTING THE 19" RACK EARS

1) CHECK THE CONTENTS QTY

AA9579-L	RACK EAR AB1608 LEFT	1
AA9579-R	RACK EAR AB1608 RIGHT	1
AB0332	SCREW M4X8 PAN TORX BK	4

2) TOOLS REQUIRED

T20 Torx driver
Large flat blade screwdriver

3) ENSURE POWER IS DISCONNECTED

Before fitting the Rack Ears, remove power to the unit and disconnect all cables.

4) REMOVE THE RUBBER BUMPERS

Remove the side bumpers using the T20 Torx driver. Store the parts and screws in case they need refitting in future. The handle does not need to be removed.

5) ATTACHING THE RACK EARS

Make sure you have a clean workspace so you don't scratch or damage the surface. Secure the rack ears to the sides of the AB168 with 4 M4x8 pan Torx screws using the T20 Torx driver. Note that the right rack ear is wider to allow access to the side connectors.

6) RACK INSTALLATION

Minimum rack space required is 4U. Position the AB168 in the 19" rack and secure using suitable rack screws.

Ventilation - Make sure that air flow around the ventilation slots at the sides and back of the unit is not obstructed. Keep these areas clear when flight casing, installing or operating the device. Blocking or obstructing the ventilation slots may cause damage to the device through overheating.

