

# **ALLEN&HEATH**

## Parts identification sheet


# **PA series all models**



### How to order parts


Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>


UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at [http://www.allen-heath.com/UK/service\\_centres.asp](http://www.allen-heath.com/UK/service_centres.asp)

**POTS FADERS & KNOBS:**

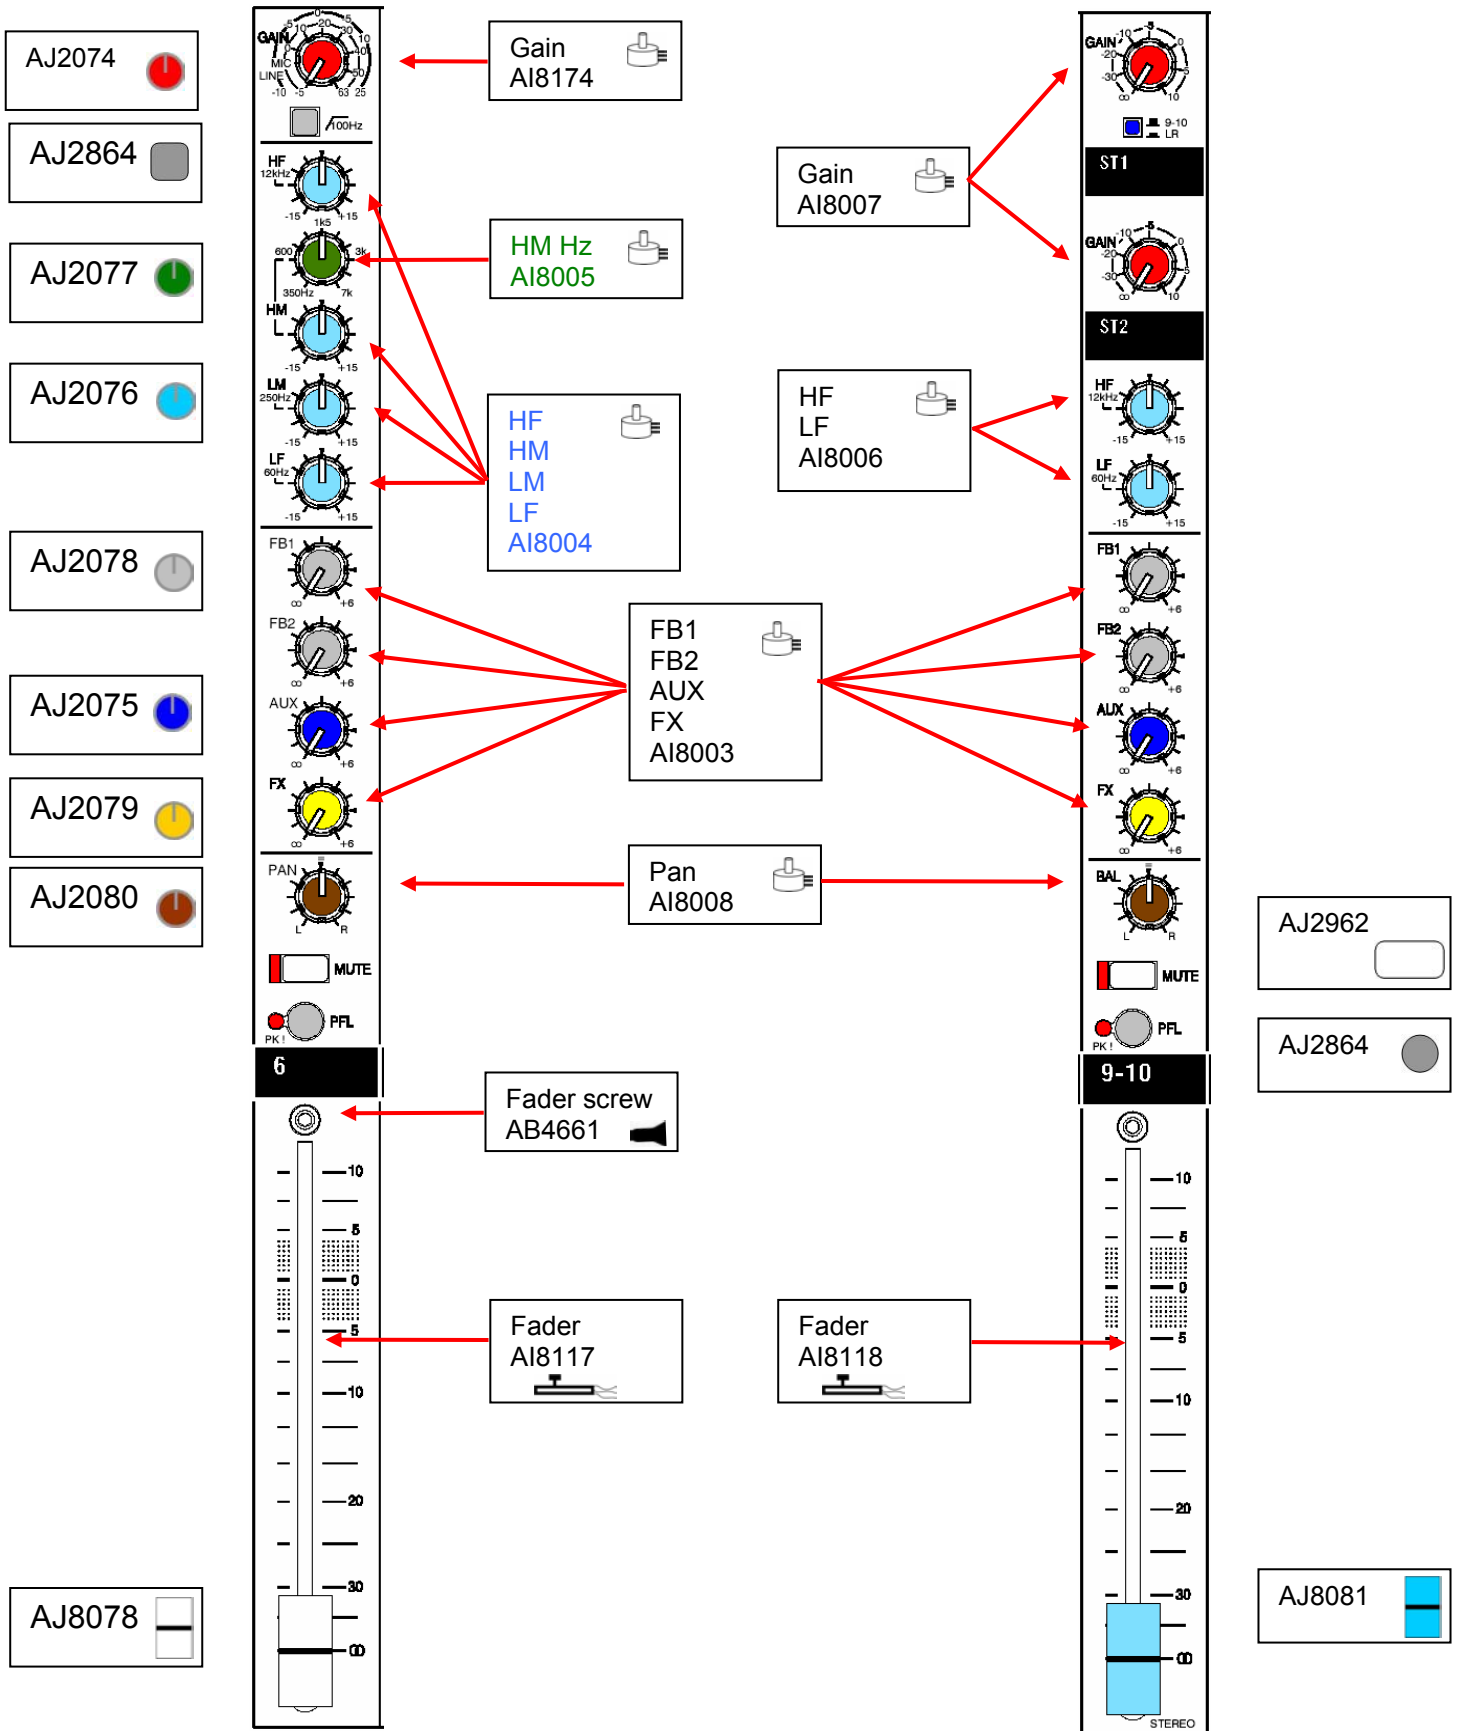

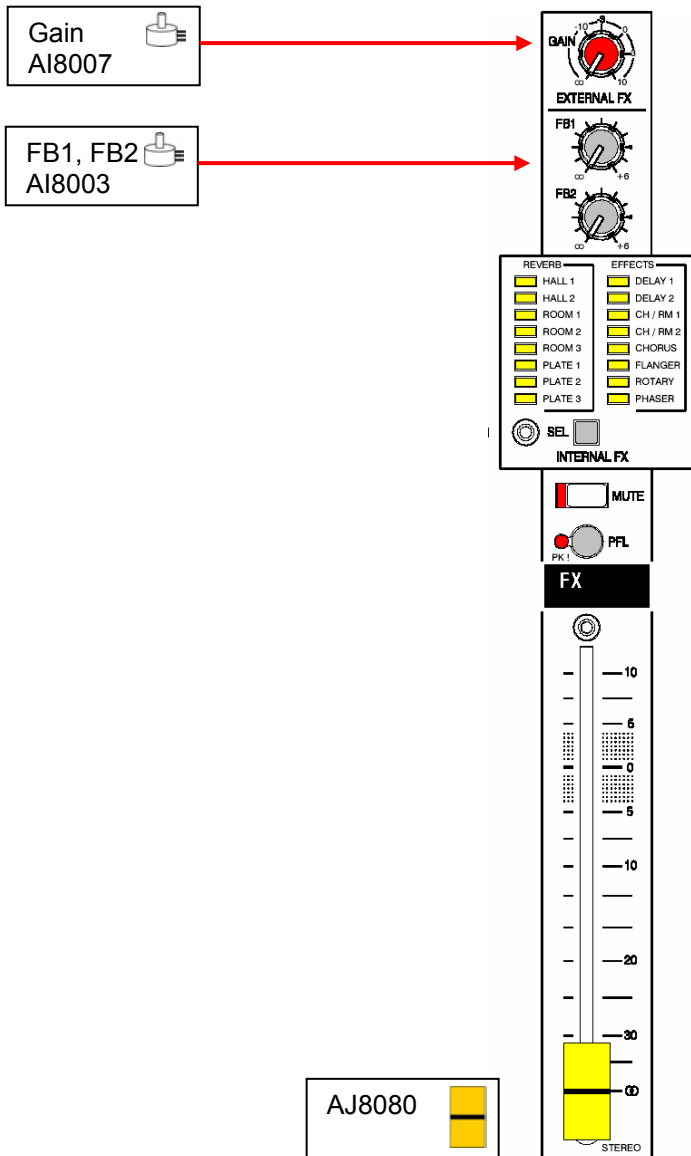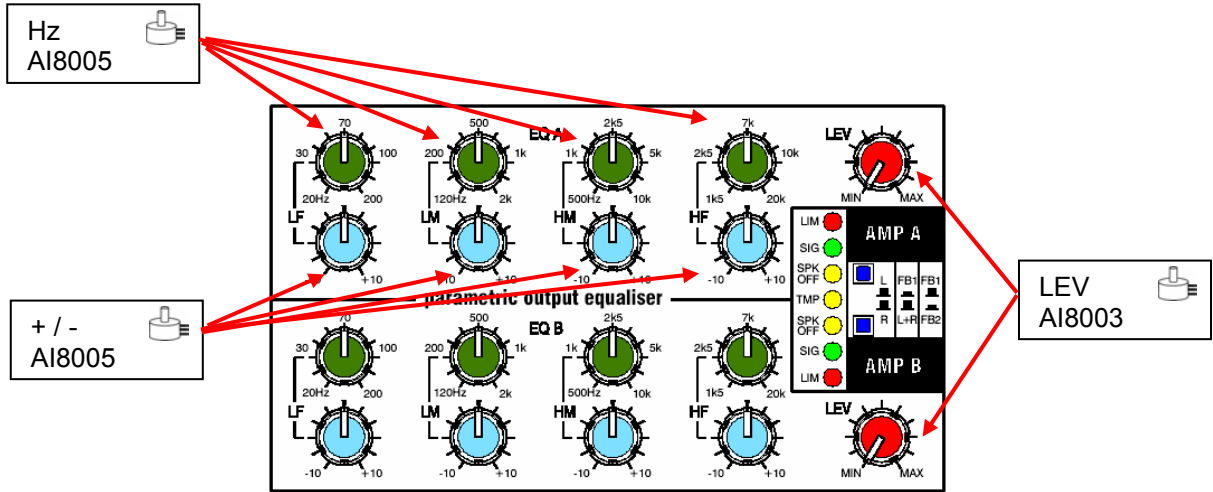

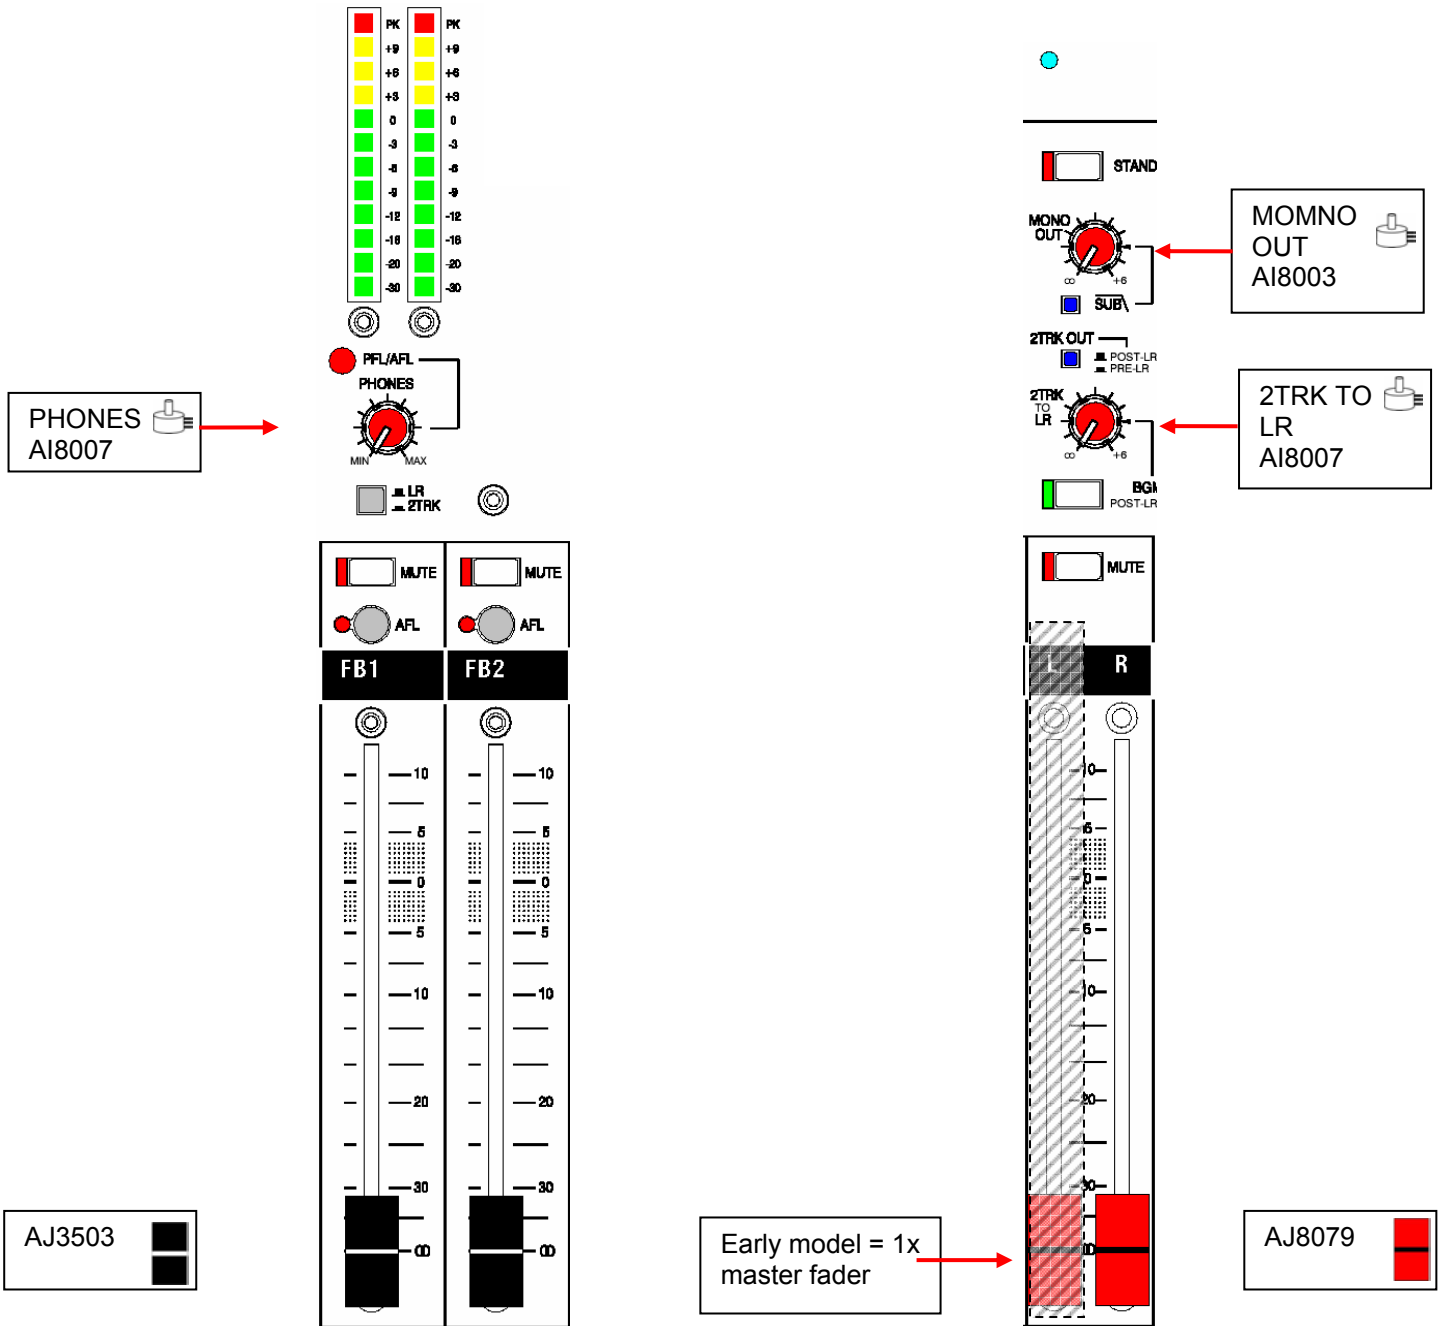

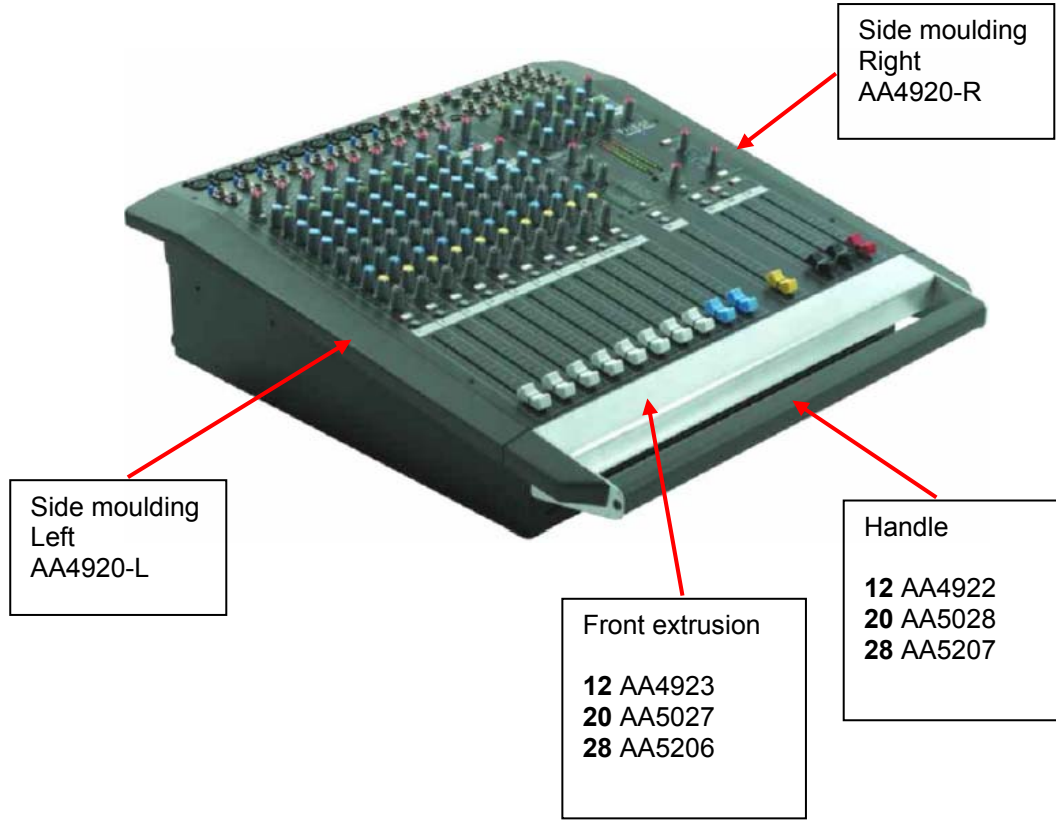


Side moulding  
Left  
AA4920-L

Side moulding  
Right  
AA4920-R

Front extrusion  
12 AA4923  
20 AA5027  
28 AA5206

Handle  
12 AA4922  
20 AA5028  
28 AA5207

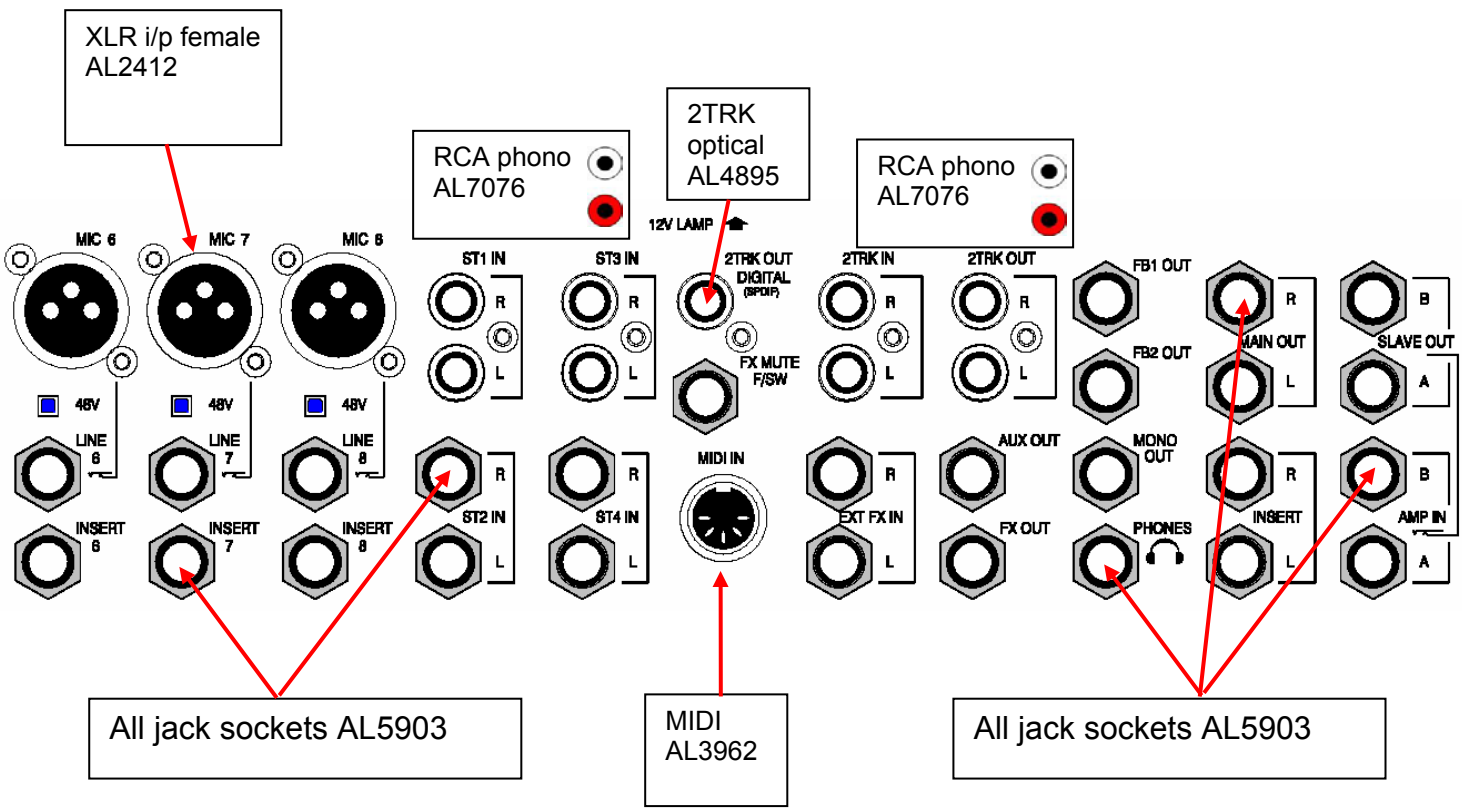

XLR i/p female  
AL2412

RCA phono  
AL7076

2TRK  
optical  
AL4895


RCA phono  
AL7076

All jack sockets AL5903

MIDI  
AL3962

All jack sockets AL5903

# CP

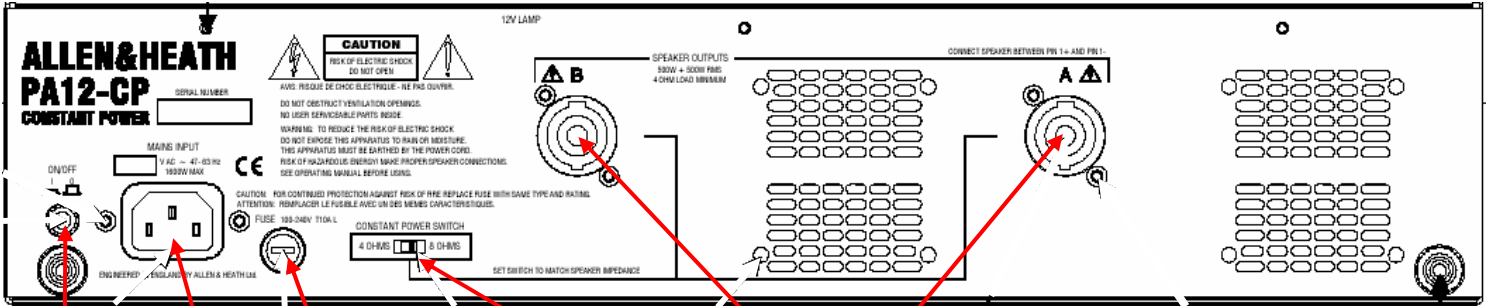

AC switch  
AL3338

Fuse holder  
AL3178

4 ohm  
8 ohm  
switch  
AL5071

Speakon  
AL8126

Cooling fan  
AM4959



Button  
AJ2887

AC inlet  
AL5118

# Un-powered

Fuse holder  
AL3178



AC switch  
AL3338

AC inlet  
AL3458


Cooling fan  
AM6601

XLR o/p male  
AL2411




**NOT ON  
PA12 !**


**INTERIOR PARTS:**

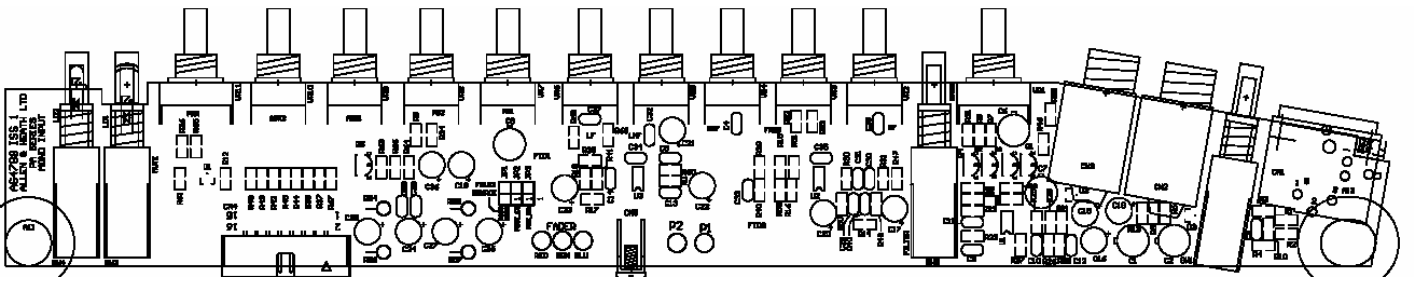


CP Mono i/p 003-034

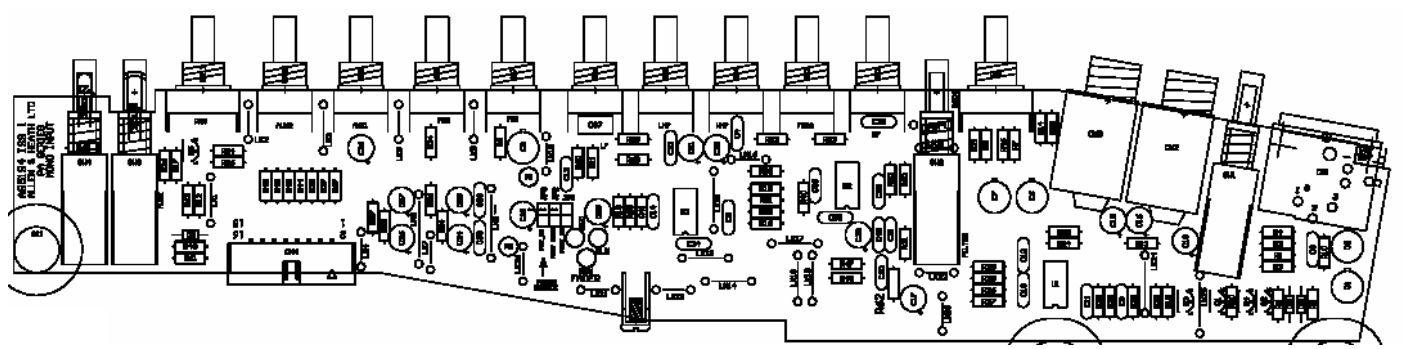


Un-powered Mono i/p 003-091

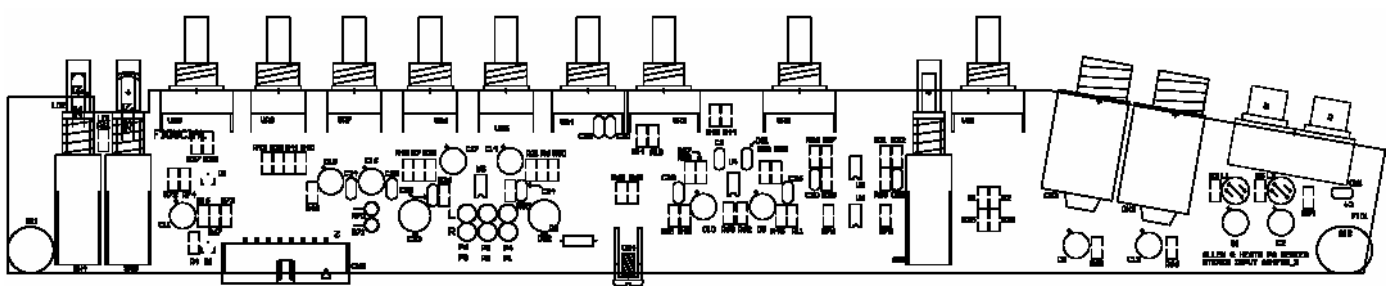


Stereo i/p 003-035

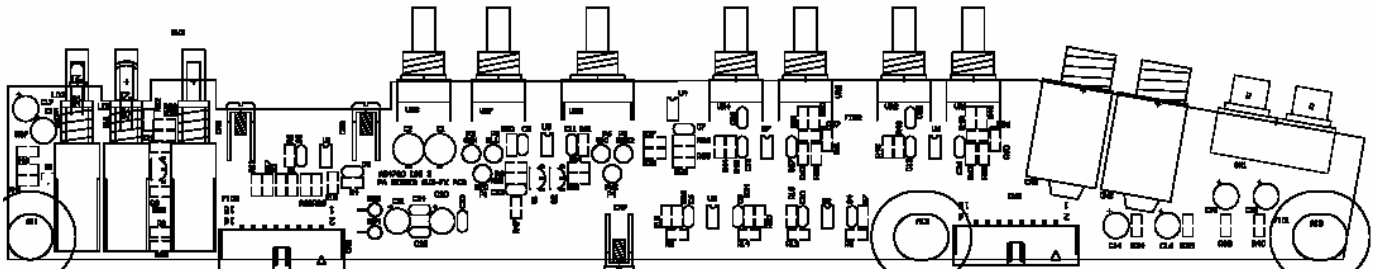

AUX FX 003-036

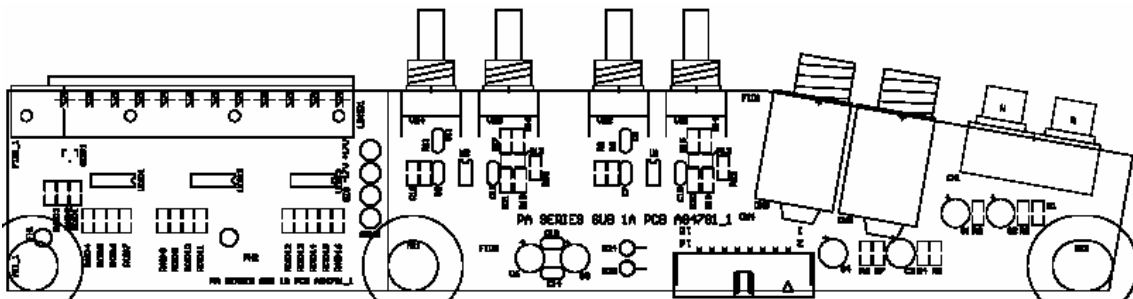


Sub 1 003-037

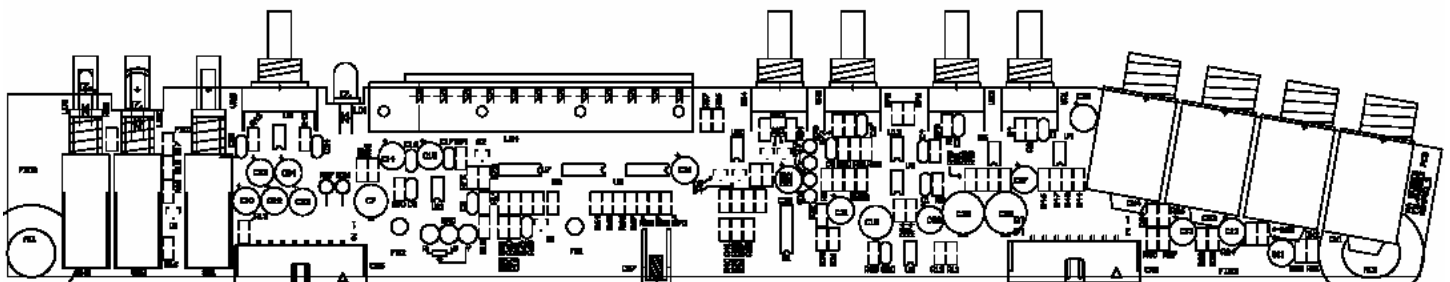


FB1 / Phones 003-038




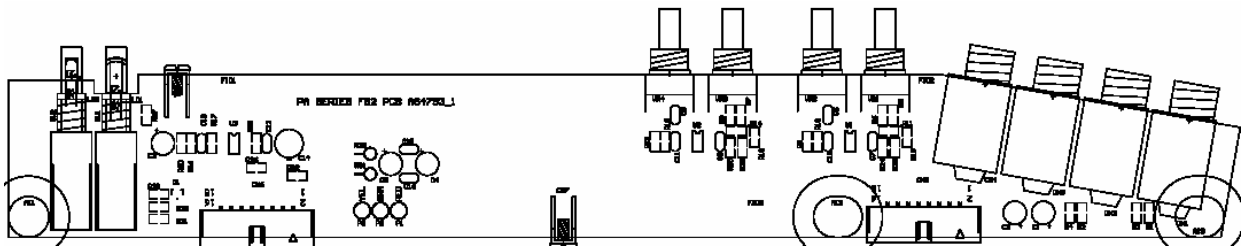


FB2 003-039

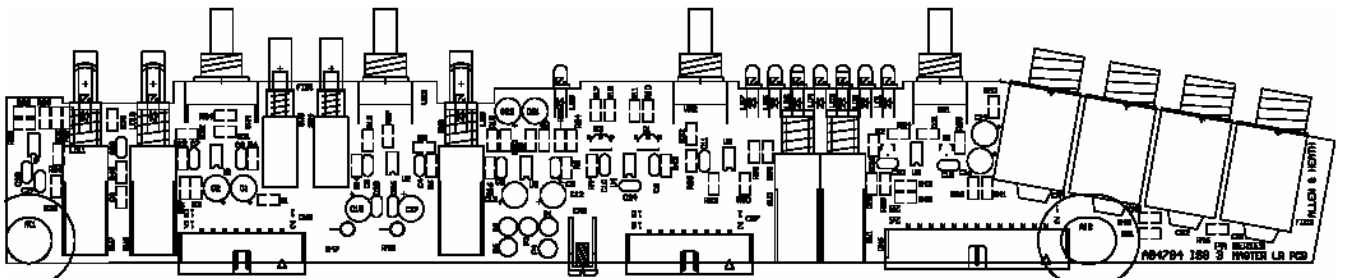


CP master LR 003-040

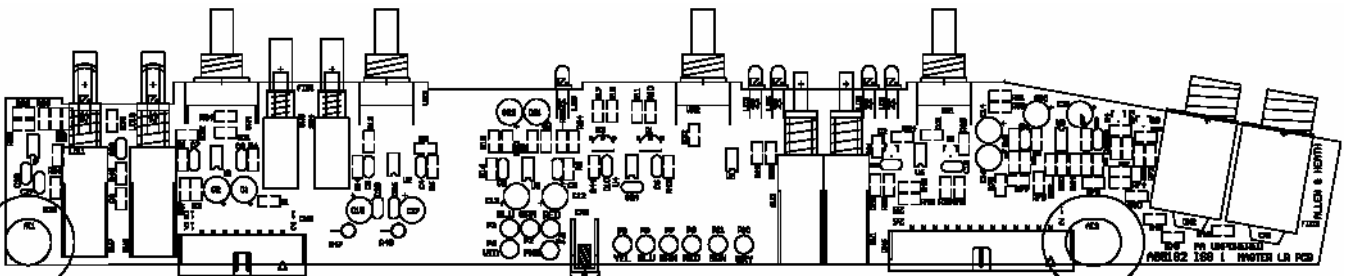


Un-powered master LR 003-092

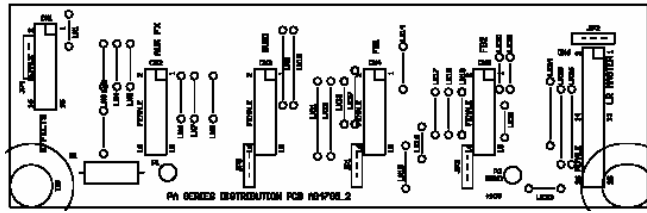


CP Distribution 003-041

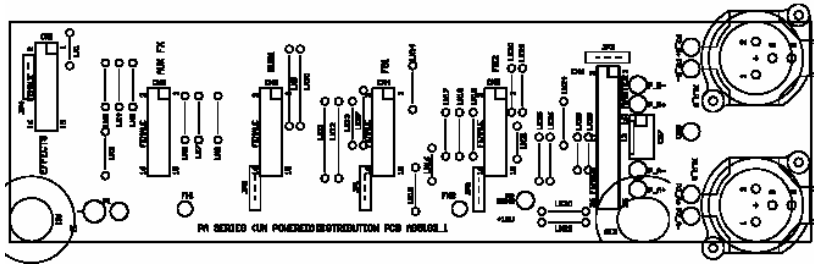

Un-powered distribution 003-093

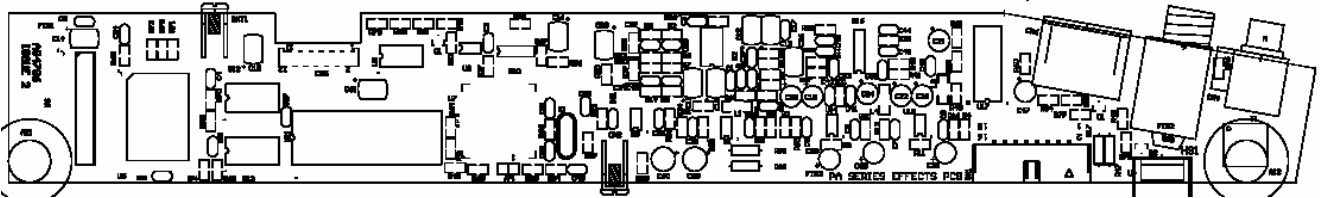


FX 003-042

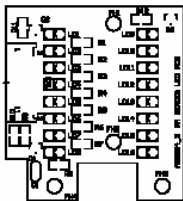


FX LED PCB 003-474 **Yellow** FX LED


FX LED PCB 003-070 **Green** FX LED

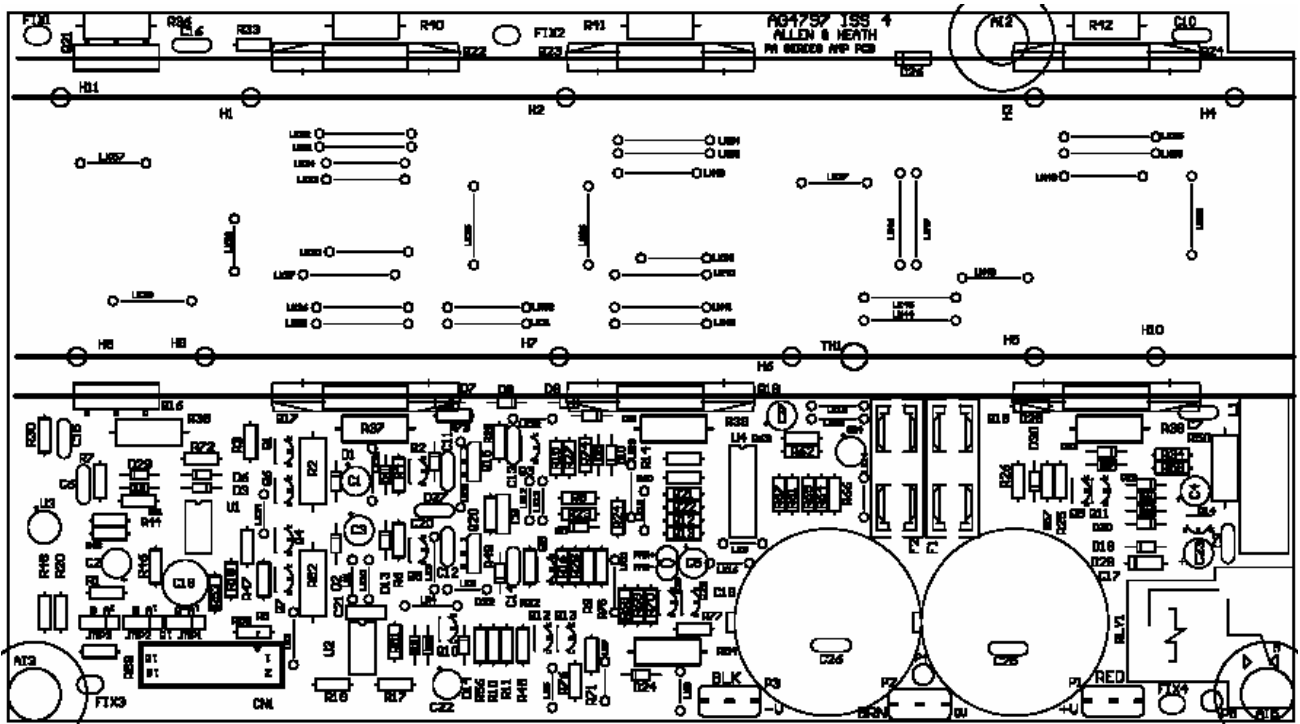

CP amplifier PCB 003-043

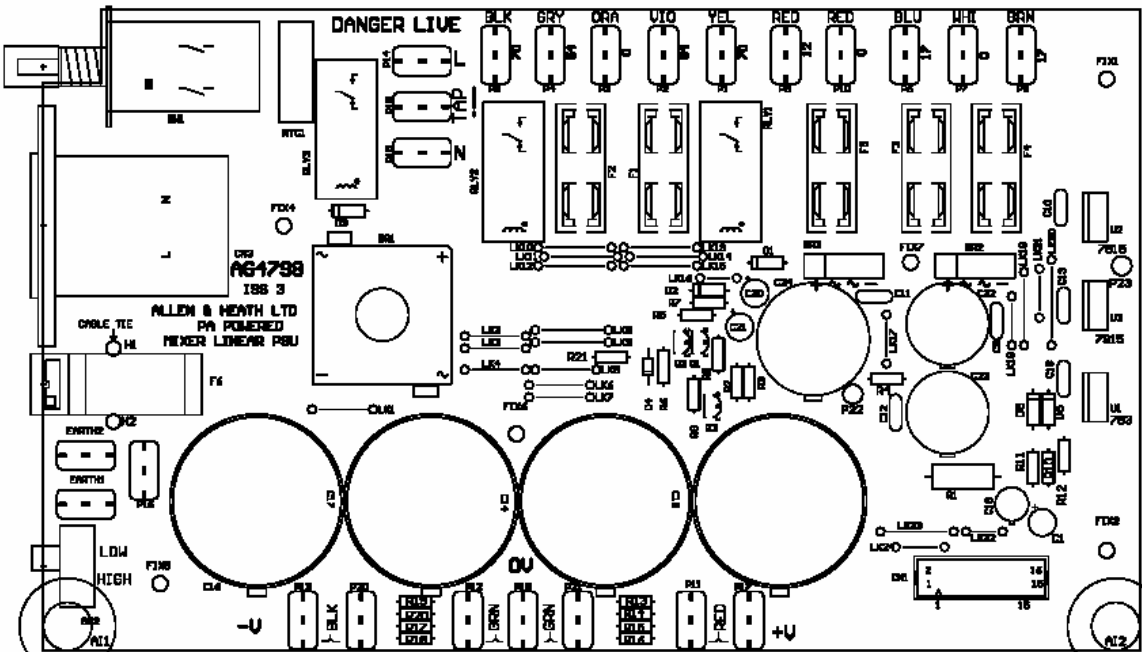

CP linear PSU 003-069

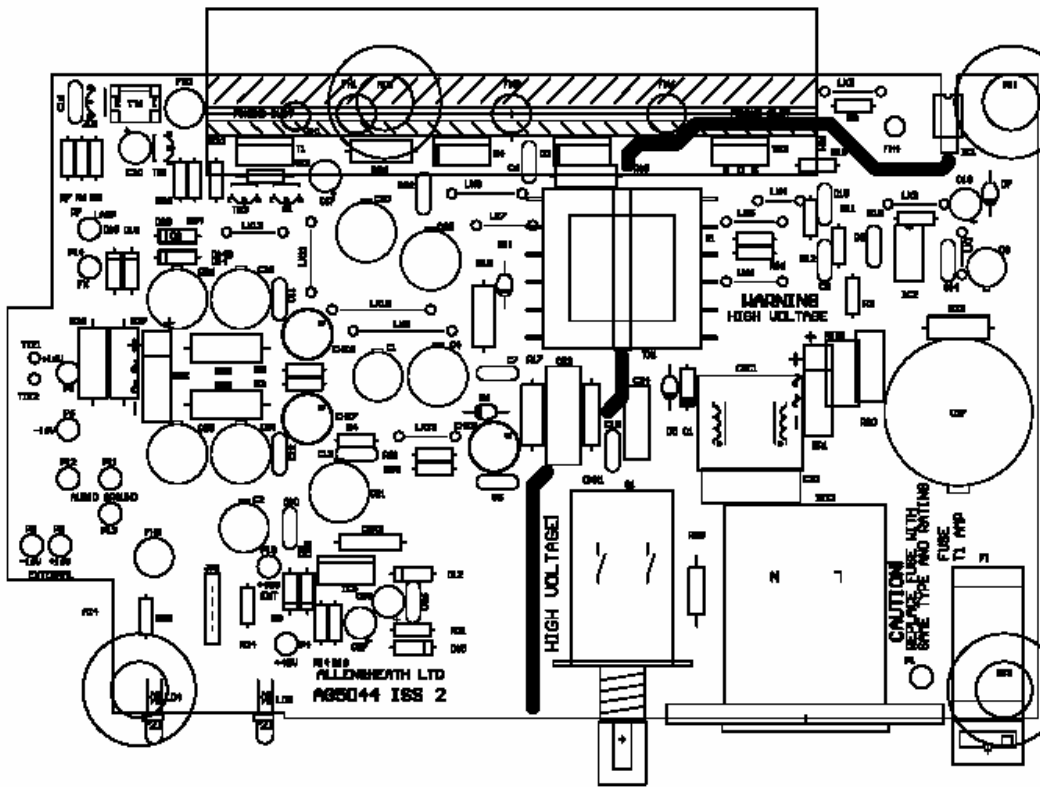

Un-powered PSU 003-094