

Trigger a preset recall in a slave iDR

You have two iDR units, one master and one slave.

Working on the master unit: -

1. In the Preset Manager Window, select the preset which, when recalled on the master unit will send a preset recall command to the slave unit.
2. Select Preset Recall from the Select devices to Add list.
3. Add it to the Contents list.
4. Now you can select which iDR unit you want to control. You need to be connected to the slave unit in order to see it in the drop down menu.

Now, each time preset 1 is selected on the master iDR, a command is sent to the slave iDR that will cause it to recall the selected preset.

Each preset in the master unit can be assigned to send a preset recall command to the slave unit.

