

# **ALLEN&HEATH**

## **Parts identification sheet**


**W21602 &  
1202**

### **How to order parts**


Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at [http://www.allen-heath.com/UK/service\\_centres.asp](http://www.allen-heath.com/UK/service_centres.asp)

**POTS, FADERS & KNOBS:**

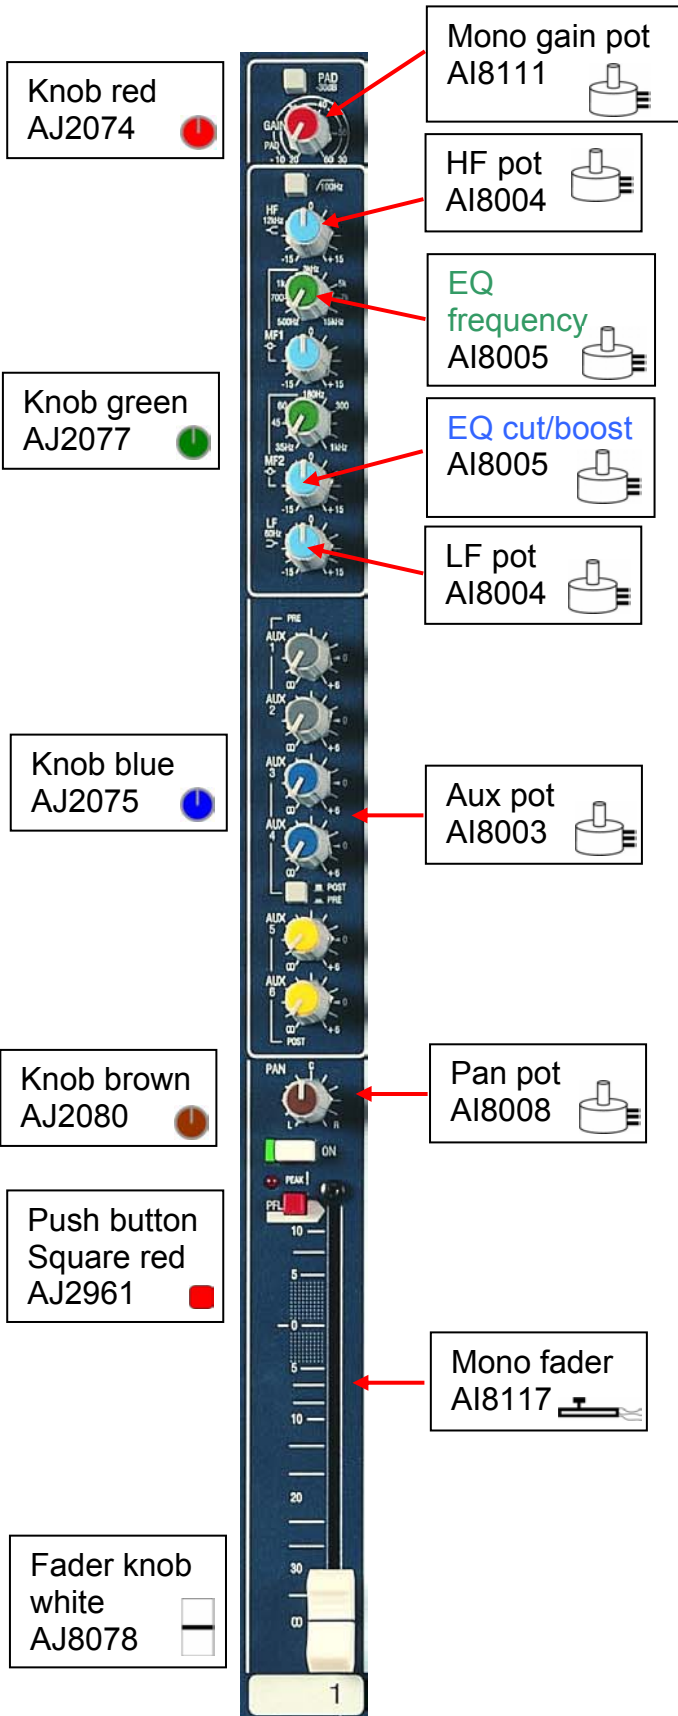

**Mono i/p**

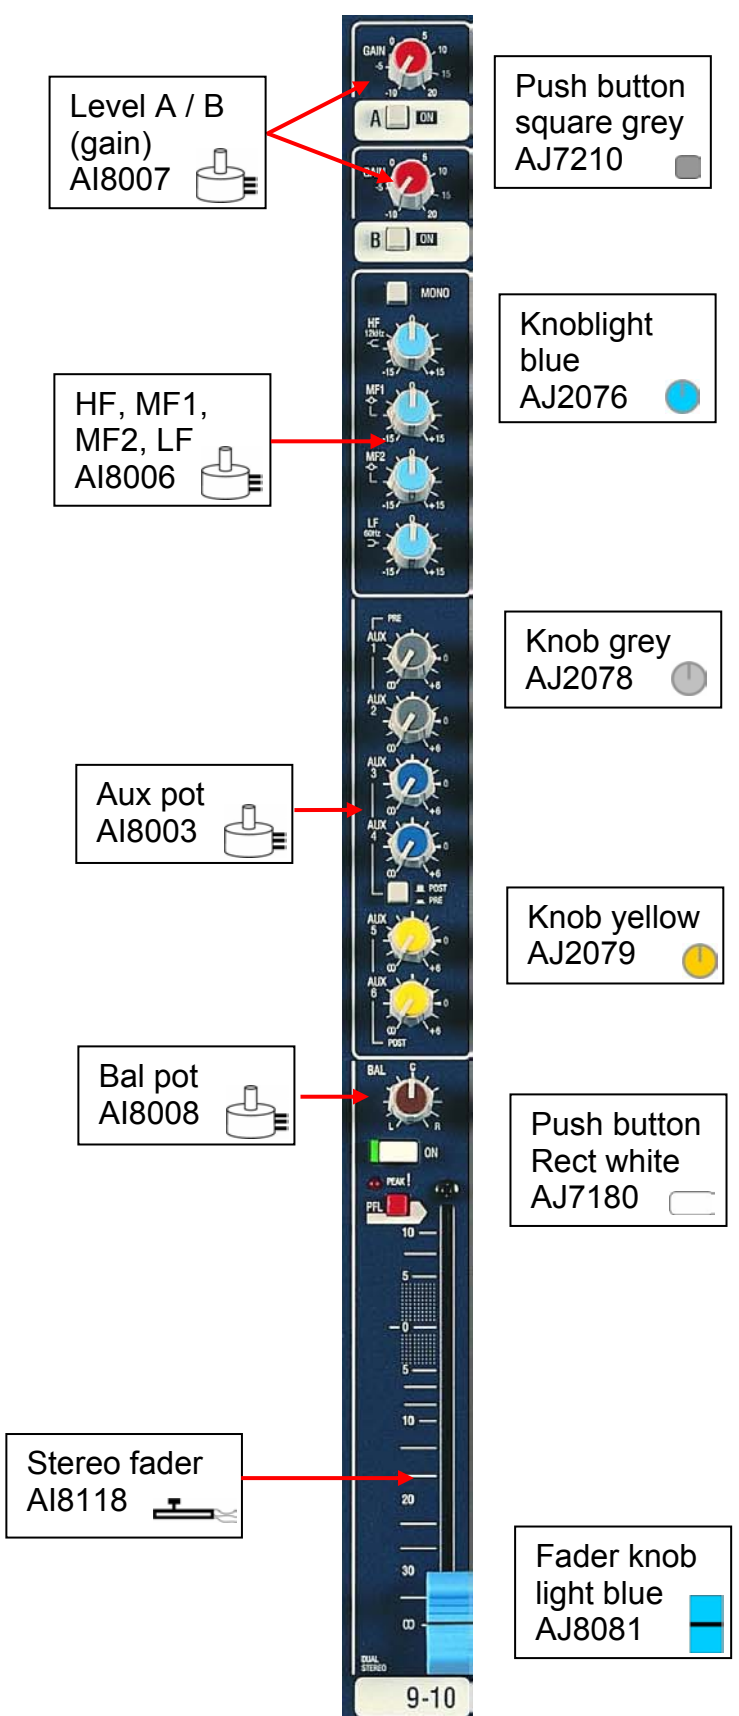

**Stereo i/p**

Headphone jack  
AL0328

ST1 to Aux  
1 / 2  
AI8003

ST2 to Aux 1  
AI8003

ST1 to LR  
AI8007

ST2 to LRI  
AI8007

Push button  
Rect grey  
AJ2865

Headphone  
level  
AI8007


Aux 1-6  
AI8003

AB level pot  
AI8007

Push button  
Square white  
AJ2960

L & R master  
faders  
AI8117

Fader knob  
yellow  
AJ8080

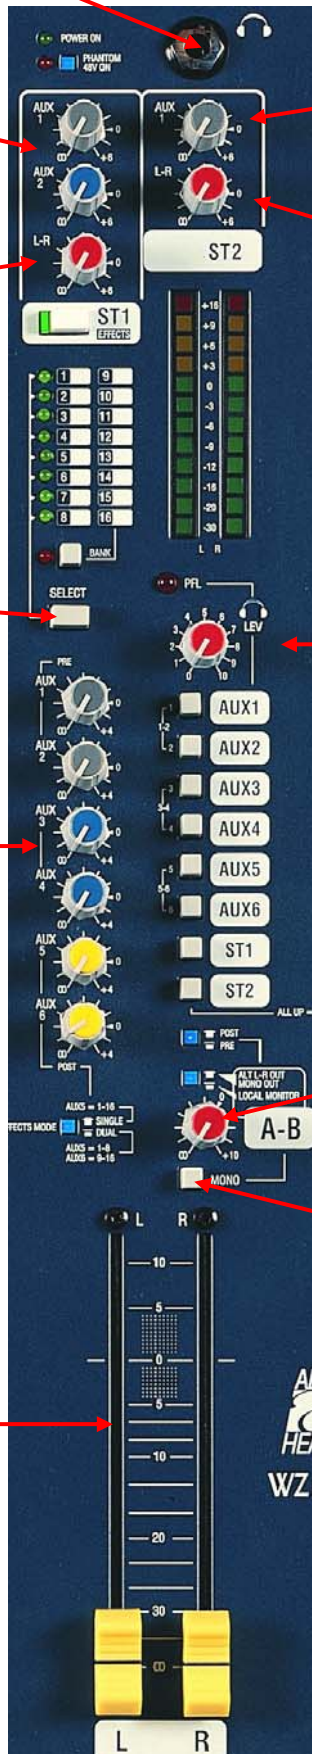


**Master L R & FX**

**W212 shown  
Parts same for  
W214**

XLR male  
AL2411

RCA phono  
AL3240

XLR female  
AL2410

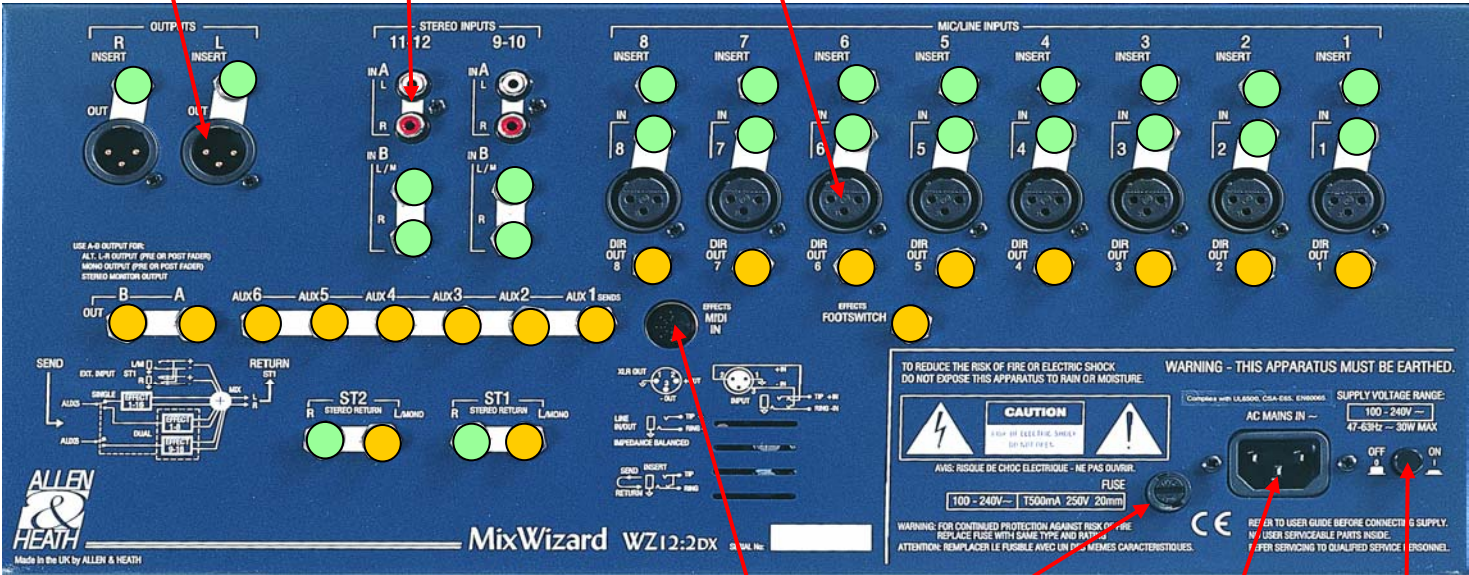

Jack sockets  
AL3407 ●

AB outputs  
Aux outputs  
Direct outs  
FX footswitch

Jack sockets  
AL3410 ●

Line inputs  
Inserts  
Stereo L/M, R  
ST1, ST2 Right

MIDI  
AI3520


Fuse holder  
AI3178

AC mains inlet  
AL3458


AC mains  
switch cap  
AJ2887 ●

AC mains  
switch  
AL3338


**INTERIOR PARTS:**

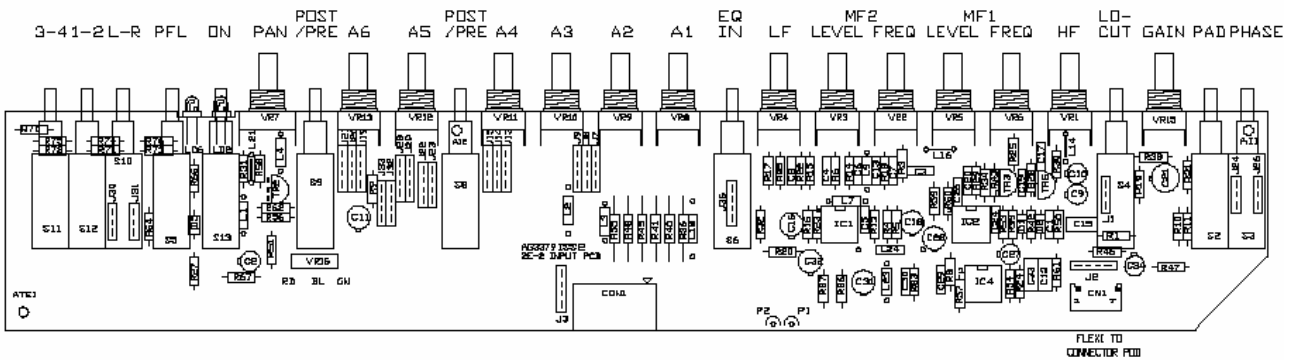

W212 / W216 mono i/p  
PCB 002-399

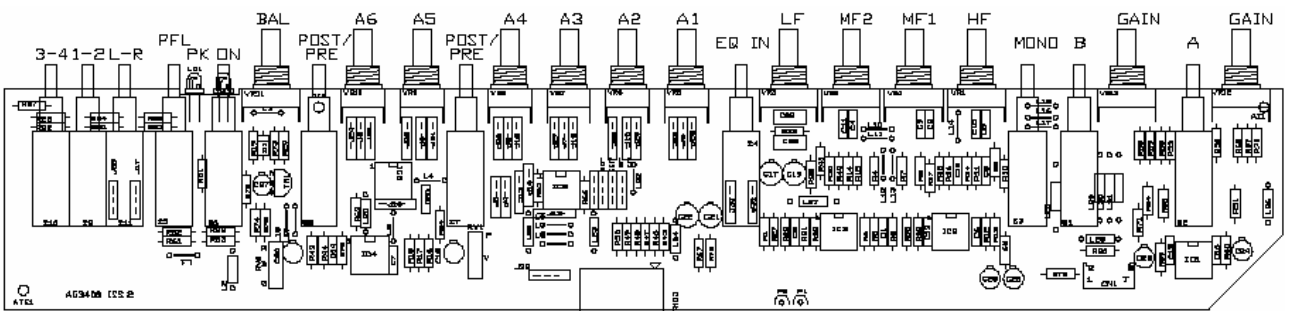


W212 stereo i/p PCB  
002-403

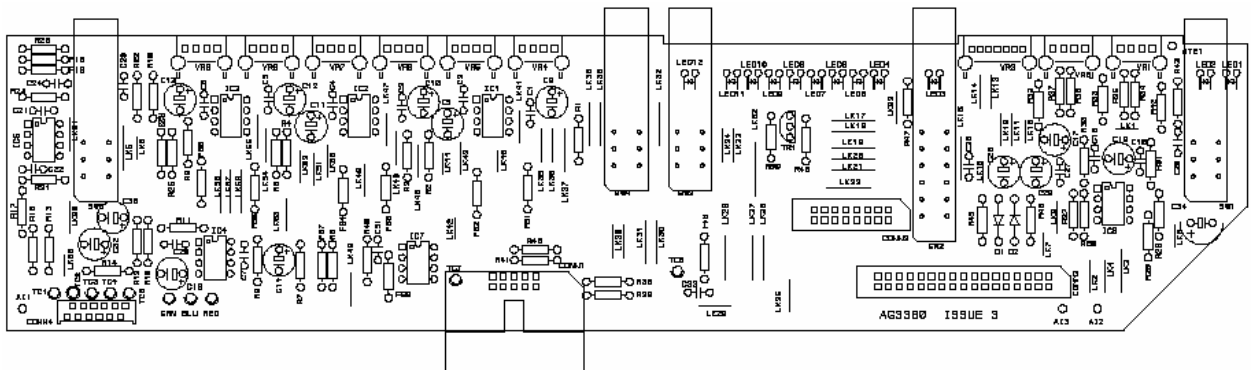


W212 / W216 master left PCB 002-400  
*Note: Left master meter is a break off on the right master PCB*



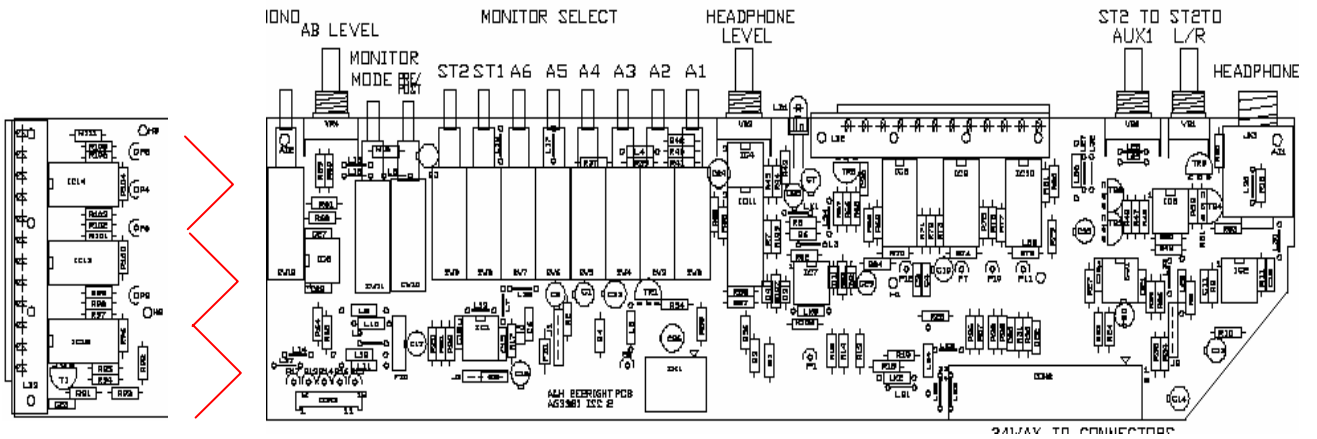


Left master meter


W212 / W216 master right PCB with left meter break off **002-401**

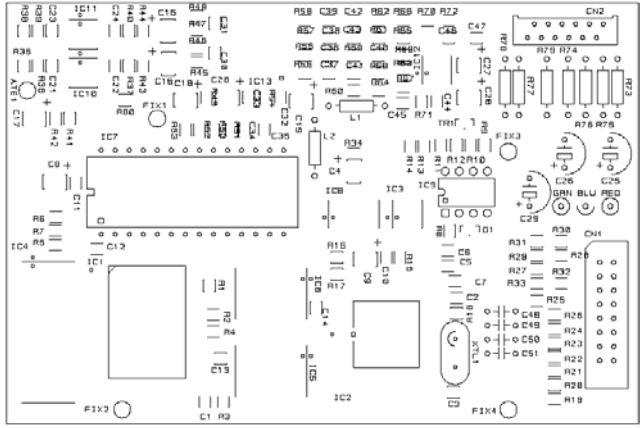

W212 / W216 FX processor PCB **002-446**

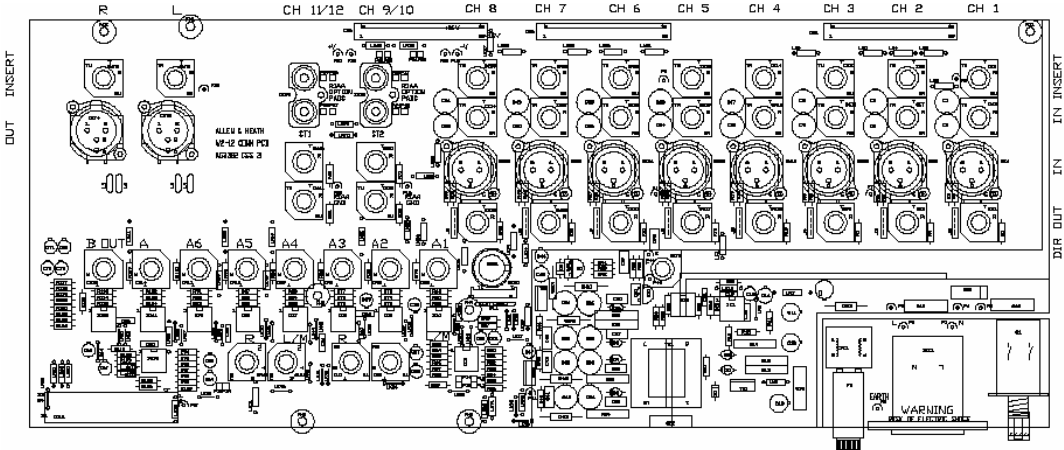

W212 rear connector PCB **002-402**

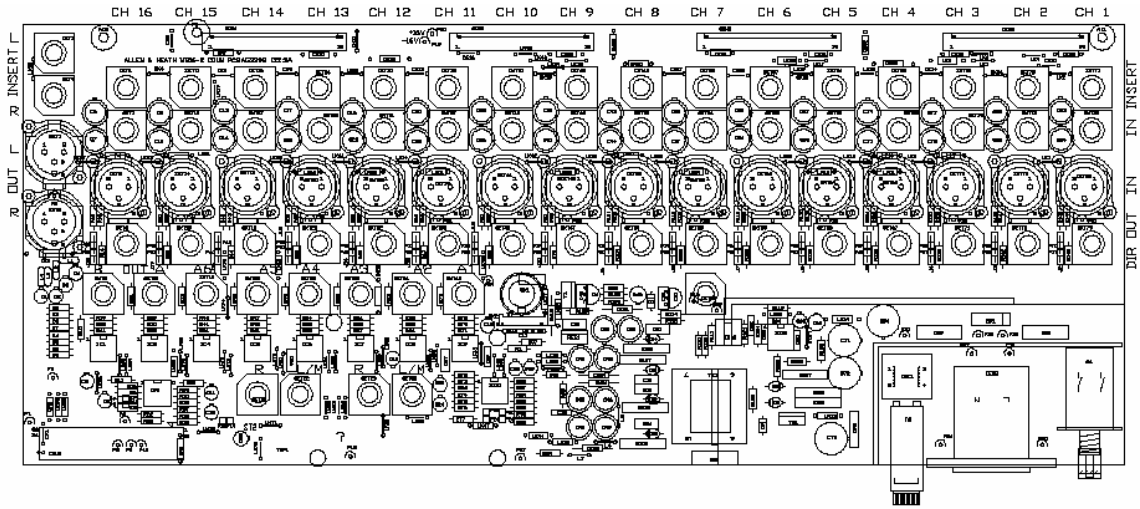

W216 rear connector PCB 002-422