




RCA PHONO PLUG SHORTING-  
Pt No. AL4396

TERMINAL POST-PT No  
AL8106

D TYPE CONNECTOR-  
Pt No. AL6351

QUAD RCA SOCKET-Pt No. AL497  
SCREW-Pt No. AB2771

JACK SOCKET-  
Pt No. AL0328

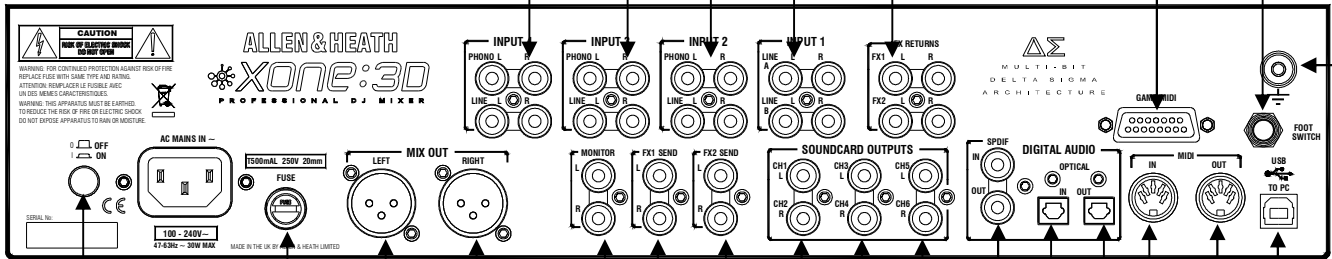

SWITCH CAP-Pt  
No AJ2887

XLR MALE SKT-Pt No. AL241 I  
SCREW-Pt No. AB2810

FUSE 20mm 500 mA-  
Pt No. AL3534


RCA DUAL VERTICAL SOCKET-  
Pt No. AL3753  
SCREW -Pt No. AB2771

PHONO DUAL  
SOCKET-Pt No.  
AL0566

OPTICAL IN SOCKET-  
Pt No. AE6096  
OPTICAL OUT SOCKET-  
Pt No. AE5899

USB SOCKET-  
Pt No. AL6096

OPTICAL IN/OUT BLANKING PLUG-  
Pt No. AL6531

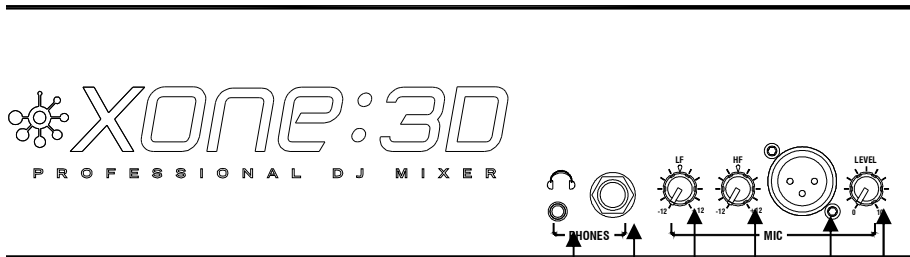

JACK SOCKET-  
Pt No. AL5323

KNOB-Pt No.  
AJ4346  
POT-Pt No.  
AI8004

KNOB-Pt No.  
AJ4346  
POT-Pt No.  
AI8003

JACK SOCKET-  
Pt No. AL0328

XLR SOCKET-  
Pt No. AL2414  
SCREW-Pt No.

CONNECTING WIREFORMS USED IN CONSOLE

From	to	
AL5904-	HEADPHONE ASSY	MASTER ASSY
AL5904-	7 SEGMENT DISPLAY	USB CONTROL ASSY
AL5904-	ANALOGUE SLAVE ASSY	POWER SUPPLY ASSY
AL5904-	JOGWHEEL (L) ASSY	MIDI SLAVE (L) ASSY
AL5904-	JOGWHEEL (R) ASSY	MIDI SLAVE (R) ASSY
AL4606-	CONNECTOR ASSY	MASTER ASSY
AL6407-	MIDI SLAVE (L) ASSY	USB CONTROL ASSY
AL6592-	MIDI CONTROL (R) ASSY	USB CONTROL ASSY
AL5485-	ANALOGUE SLAVE ASSY	USB CONTROL
AL6098-	GAMEPORT ASSY	USB CONTROL ASSY
AL3817-	LINEAR FADER ASSY'S	INPUT ASSY'S
AL3817-	X FADER ASSY	FILTER ASSY
AH2228	MIDI FADER ASSY'S	MIDI SLAVE ASSY'S

