


iDR-in front

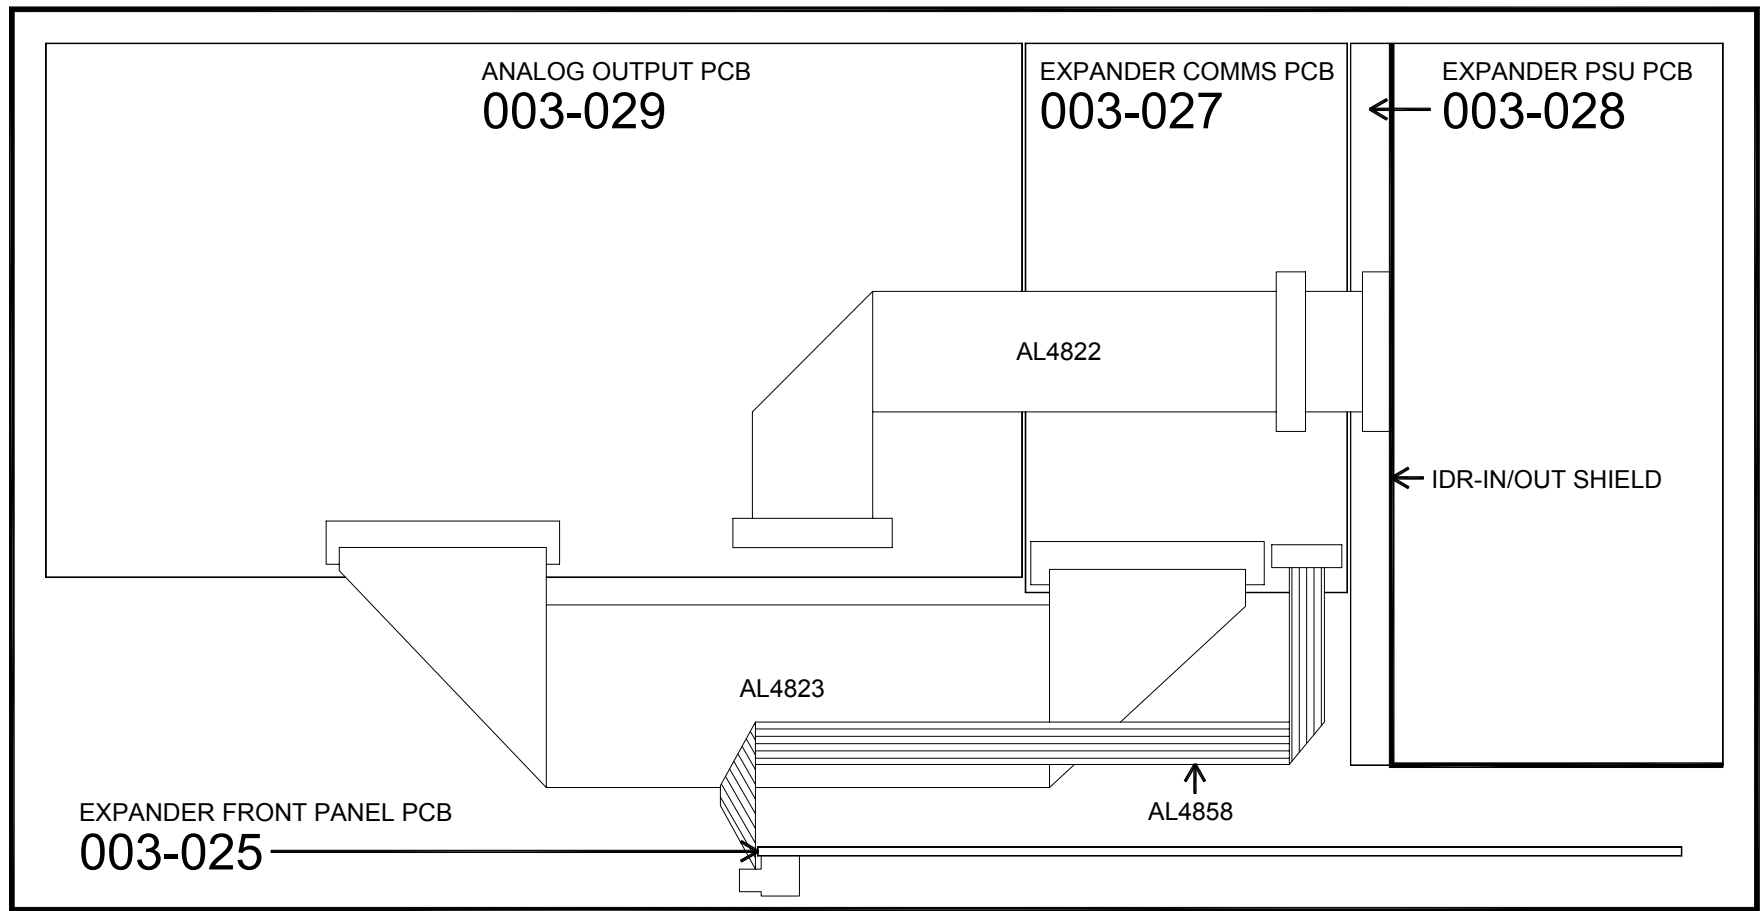

iDR-out front

Product.....iDR-IN/100
iDR-IN/110
iDR-IN/120
iDR-IN/220
iDR-IN/240
 Pack Assembly 003-022
 Main Assembly 003-023

Product.....iDR-OUT/100
iDR-OUT/110
iDR-OUT/120
iDR-OUT/220
iDR-OUT/240
 Pack Assembly 003-022
 Main Assembly 003-024

Analog Input PCB..... 003-004
 Expander Front Panel PCB 003-025
 Input Expander Comms PCB ... 003-026
 Output Expander Comms PCB 003-027
 Expander PSU PCB 003-028
 Expander Analog Output PCB.. 003-029