


EXPANDING THE INPUTS WITH SYS-LINK

The number of input channels feeding the outputs may be expanded by connecting **GR1** units together using the SYS-LINK system. A single cable connects the L,R and M outputs of one unit to the buss inputs of the next.

Use screened multiway cable connected as shown below to standard 15way D-type male connectors. Do not interconnect the DIR OUTs to the AUX INs when linking L,R and M outputs. The example shown below includes interconnection of the alarm override system so that one alarm source controls all units simultaneously.

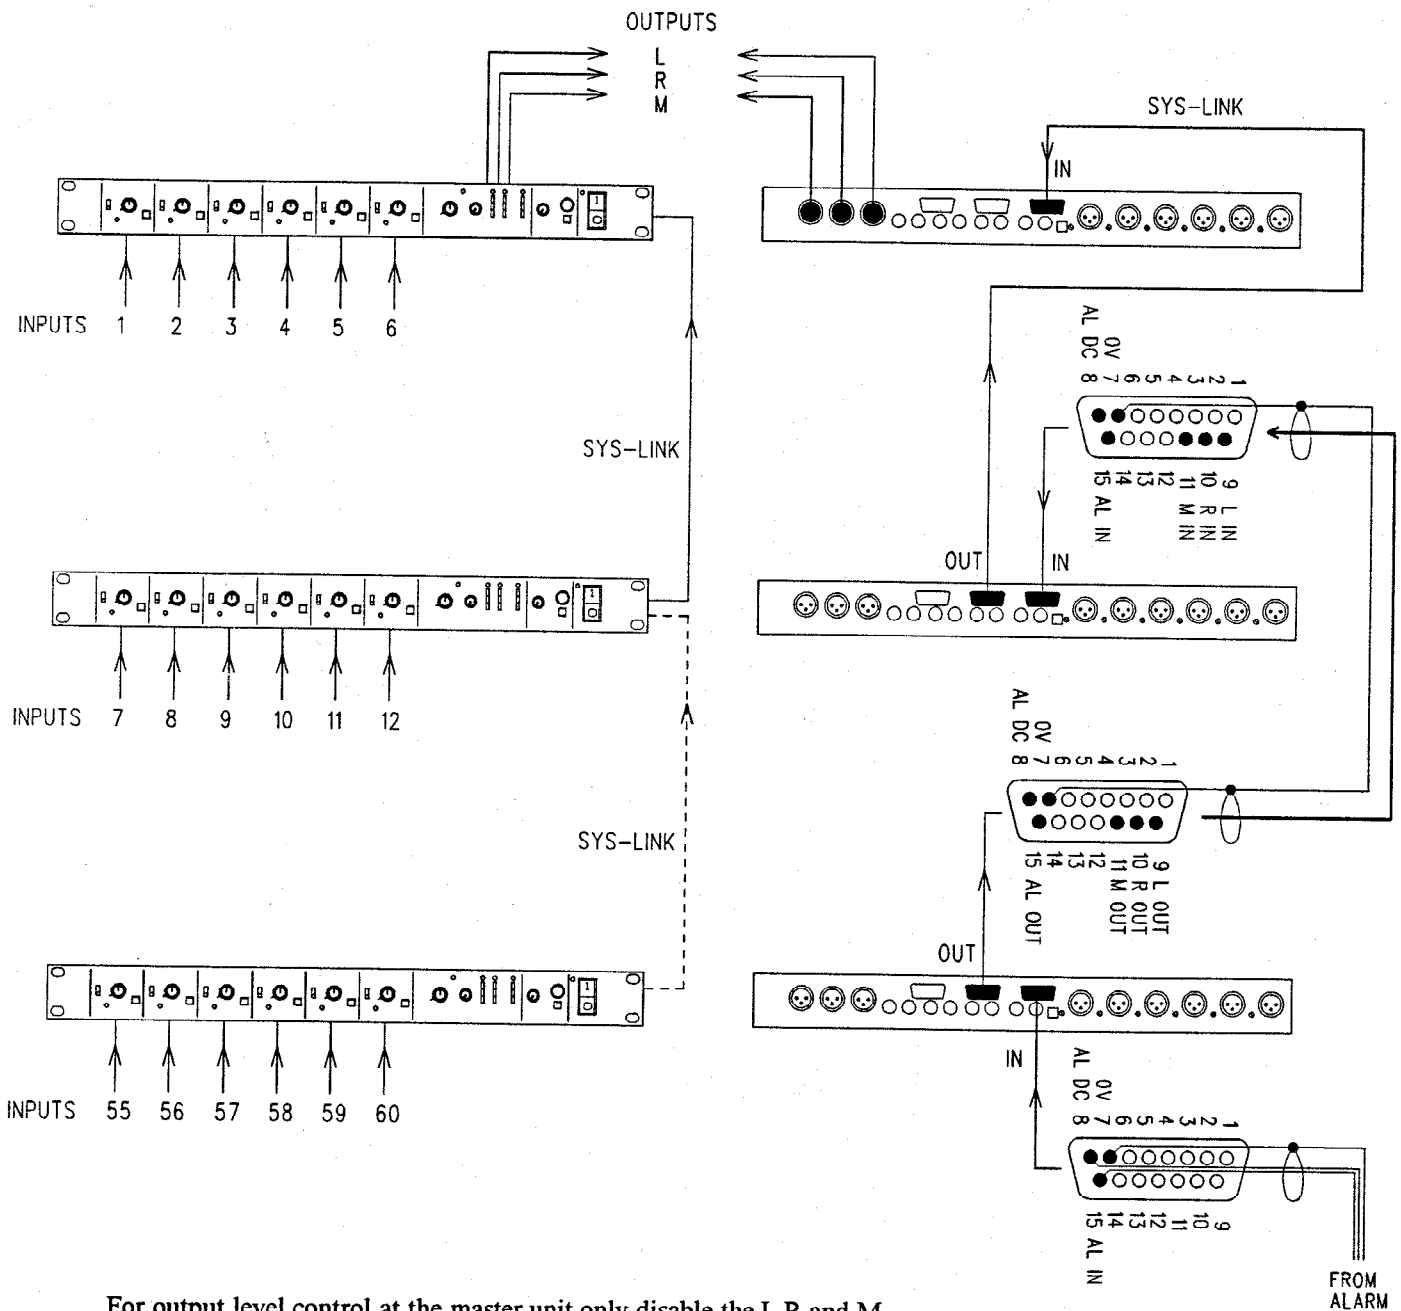

For output level control at the master unit only disable the L,R and M output level controls on the slave units by removing the INT/EXT links J35 and J36.