

ALLEN&HEATH

Knowledge-base article



W3

Mono input PCB compatibility

W3 162

Use Mono Input AG5390 or AG5880 with AG5394 Conn
Use Mono Input AG6315 with new AG6316 Conn.

W3 122

Use Mono Input AG5390 or AG5880 with AG5401 Conn.
Use Mono Input AG6315 with new AG6317 Conn.

W3 1442

Use Mono Input AG5400 or AG5988 with AG5399 Conn
Use Mono Input AG6313 with new AG6314 Conn.

Modifications are shown on the following pages.

Copyright © 2011 Allen & Heath Limited. All rights reserved

Allen & Heath Limited

Kernick Industrial Estate, Penryn, Cornwall, TR10 9LU, UK



Assignment of 003-489 PCB ASSY W3 14 MONO I/P AG6313,
for use as a substitute

for version 003-208 PCB ASSY W3 1442 MONO INPUT AG5988 or AG5400 .

dependant on assignment, 003-489 PCB ASSY W3 14 MONO I/P (C) AG6313 can be used with: -

003-490 PCB ASSY W3 1442 CONNECTOR (C) AG6314 (use factory default)

003-209 PCB ASSY W3 1442 CONNECTOR AG5399 (re-assign as below)

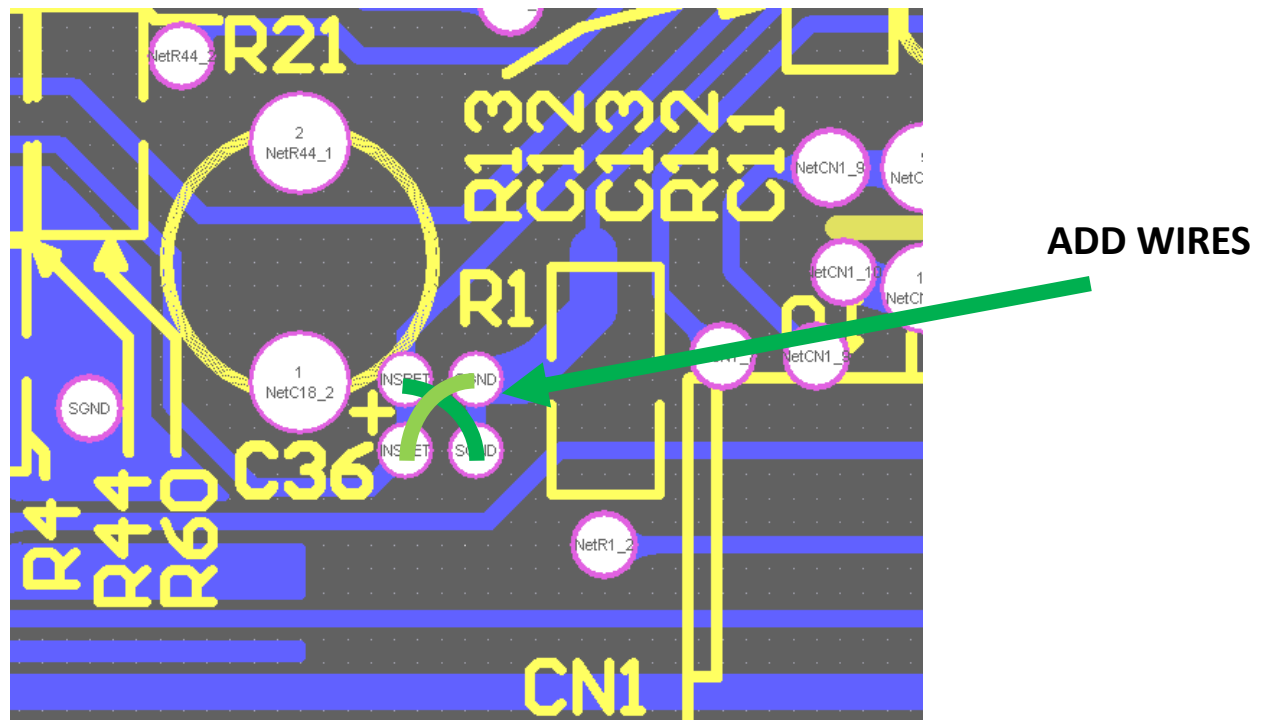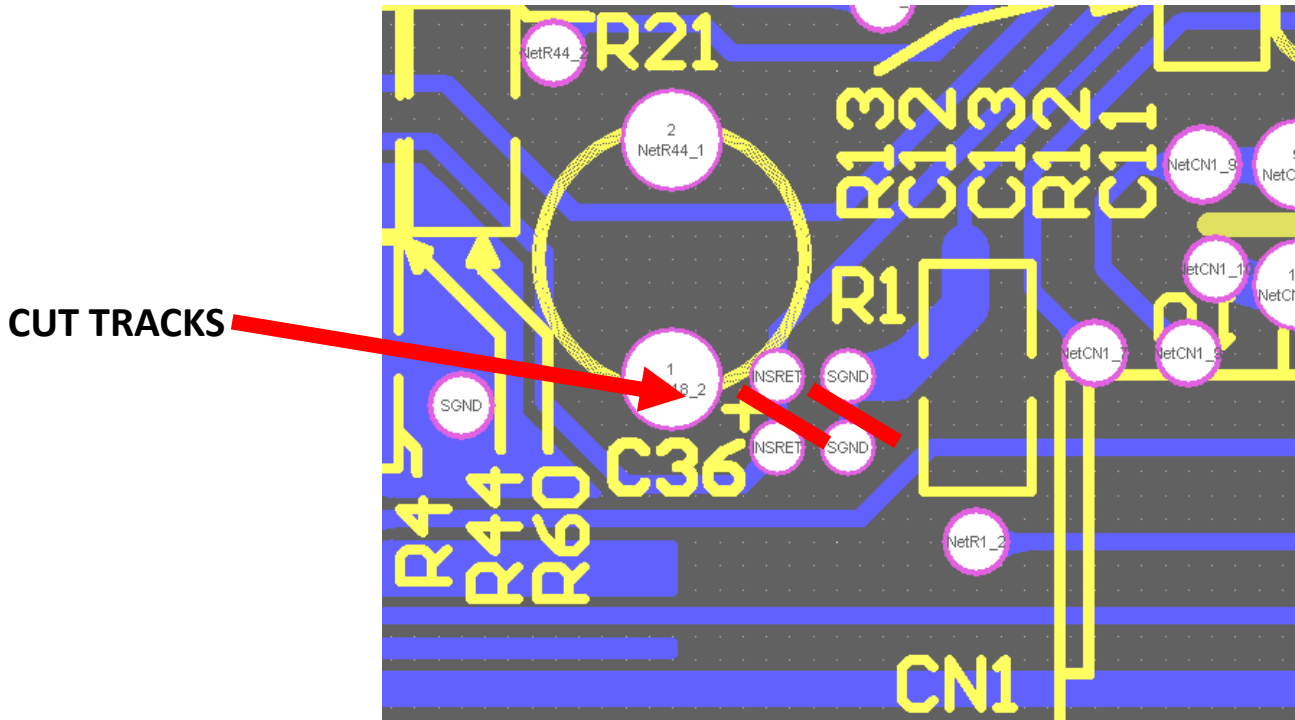

Assignment of 003-491 PCB ASSY W3 16/12 MONO I/P (C) AG6315, for use as a substitute for version 003-167 PCB ASSY W3 16/12 MONO INPUT AG5880 - only if 003-167 un-available.



003-491 PCB ASSY W3 16/12 MONO I/P (C) AG6315 can be used with, dependant on assignment, either;

003-492 PCB ASSY W3 162 CONNECTOR (C) AG6316 (use factory default)

003-170 PCB ASSY W3 162 CONNECTOR AG5394 (re-assign as below)

003-493 PCB ASSY W3 122 CONN (C) AG6317 (use factory default)

003-217 PCB ASSY W3 122 CONN AG5401 (re-assign as below)

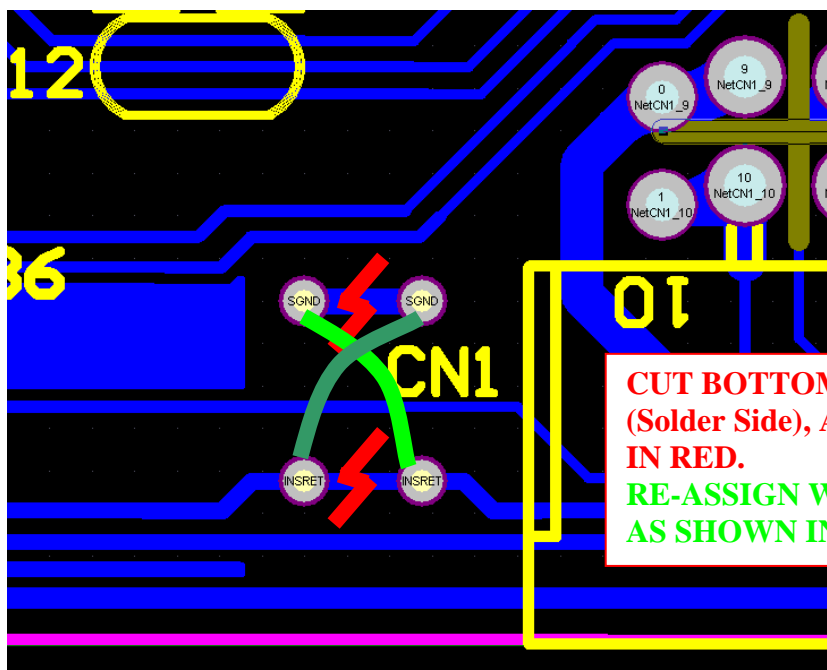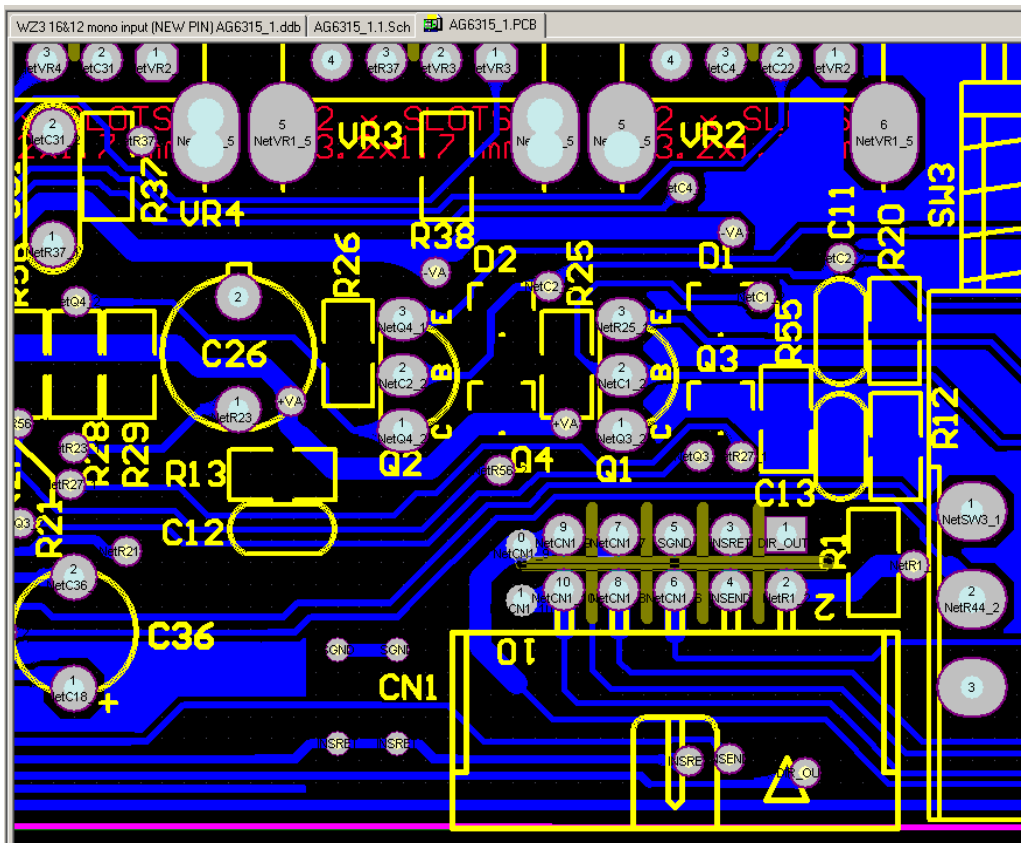

CUT BOTTOM TRACKS (Solder Side), AS SHOWN IN RED.
RE-ASSIGN WITH WIRE AS SHOWN IN GREEN.